




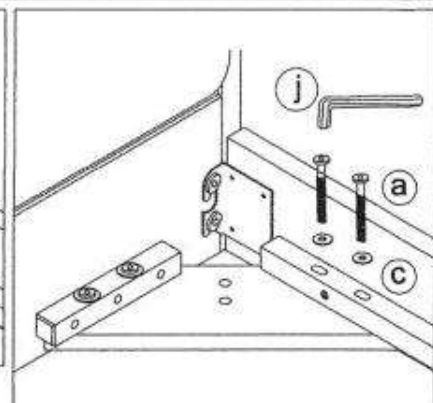 
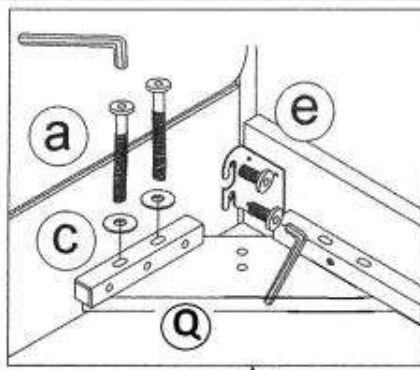 
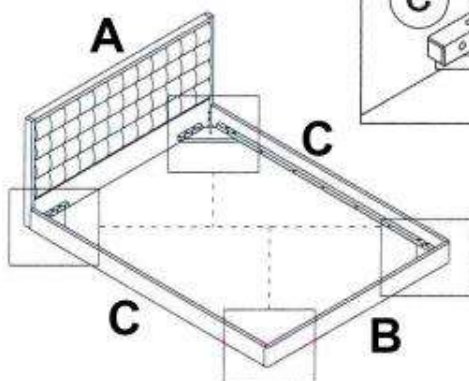 


SOLOMO 160


 
Part List

 
Step 01

A		x 1
B		x 1
C		x 2
D		x 4
E		x 5

 


Step 02

F		x 1
G		x 1

 
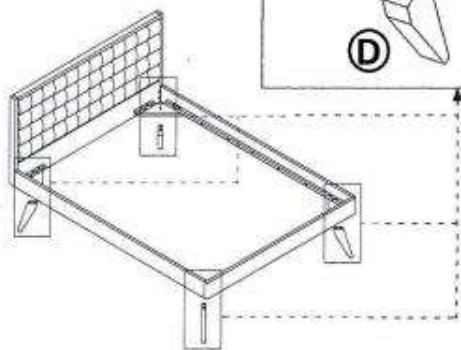 

 
 

 
 


 
 
 
 
 
Step 03

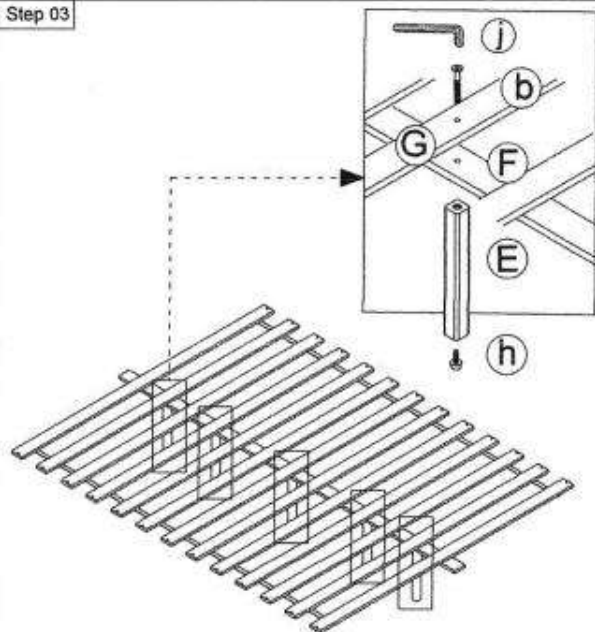

Step 04

Hardware List

a		x16
b		x 5
c		x16
d		x 8
e		x 8
f		x 8
g		x 26
h		x 5
i		x 2
j		x 4

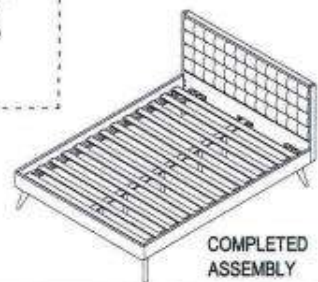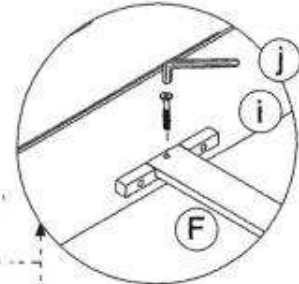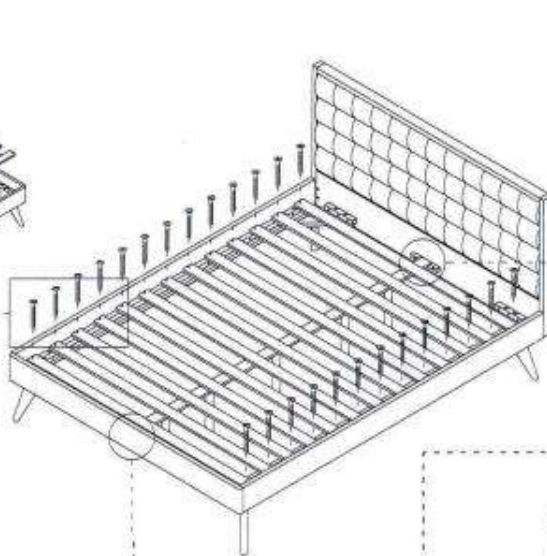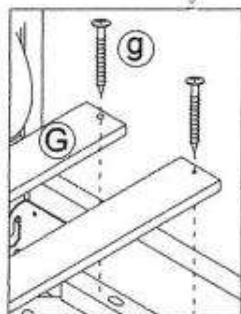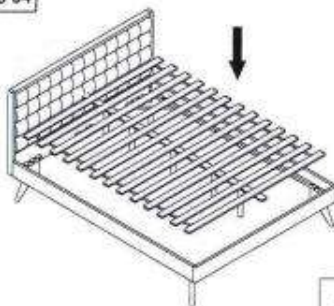

COMPLETED ASSEMBLY

HALMAR Sp. z o.o.

ul. Centralnego Okręgu Przemysłowego 2, 37-450 Stalowa Wola, POLSKA / POLAND

tel. +48 15 843 28 10, fax: +48 15 842 19 57, e-mail: office@halmar.com.pl