



Tools required





- Do not throw away packaging materials until assembly is complete.
- Assemble this item on a soft surface, such as cardboard, towel, carpet. It should protect finish.




- All connections should be tight.
- Until starting assembling please read whole instruction.
- If You notice that the package is damaged don't assembly.

Parts in the packaging

• Before starting work please make sure You have all the parts.




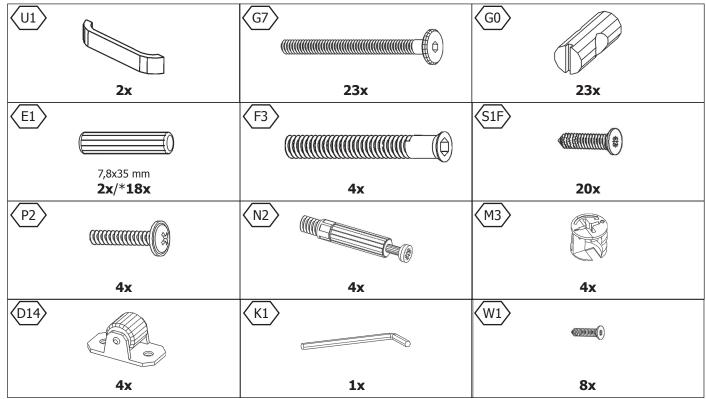


^{*}wersja z szufladą

APRO Group LTD - Bed Page 1/6


Other elements

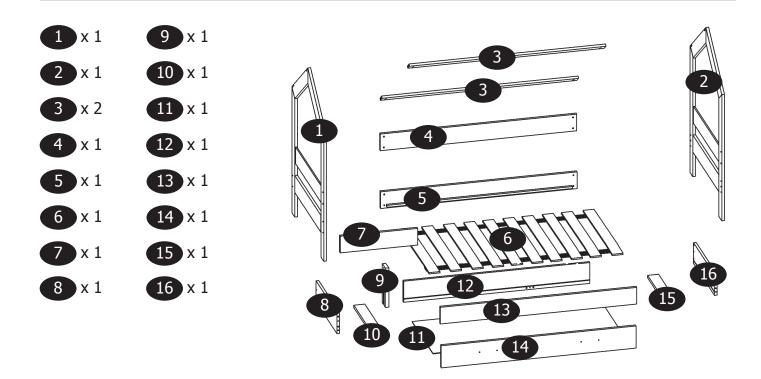


Assembly instructions

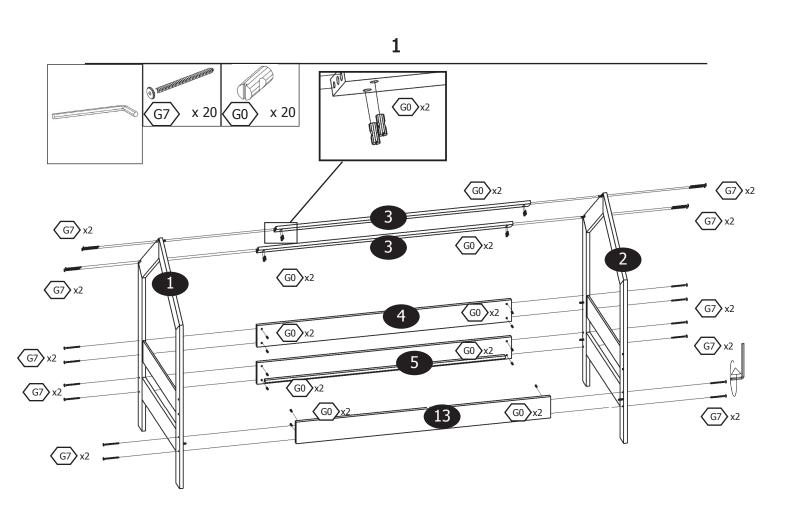


Page 2/6 APRO Group LTD - Bed

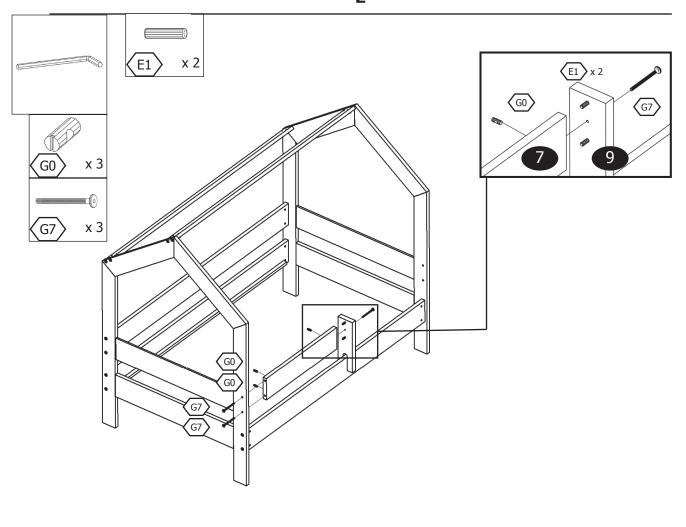

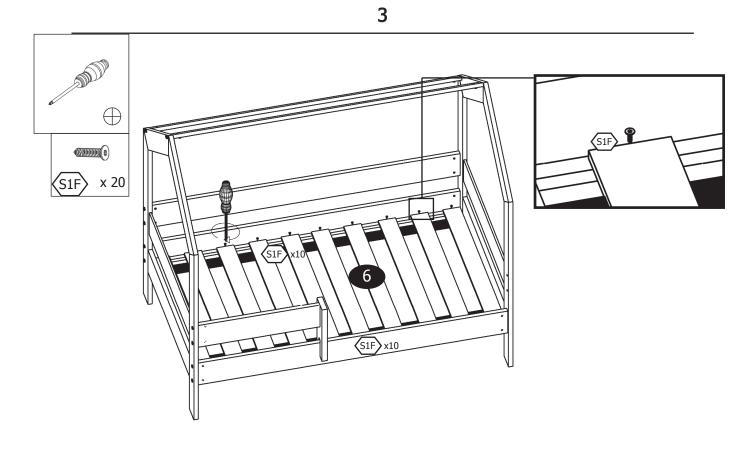



APRO Group LTD - Bed Page 3/6


BED HOUSE 80x160 - VERSION WITH A DRAWER

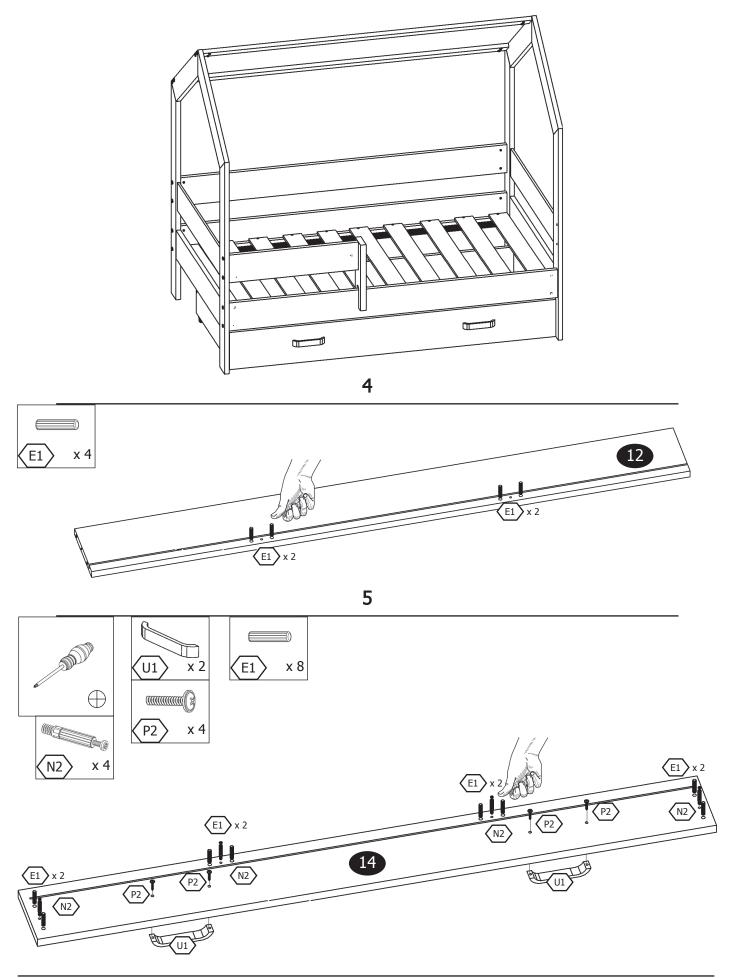

Page 4/6 APRO Group LTD - Bed

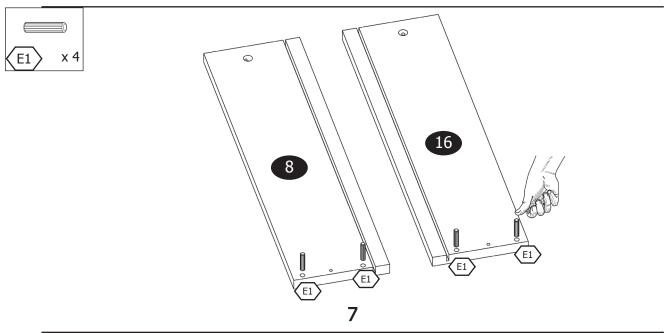

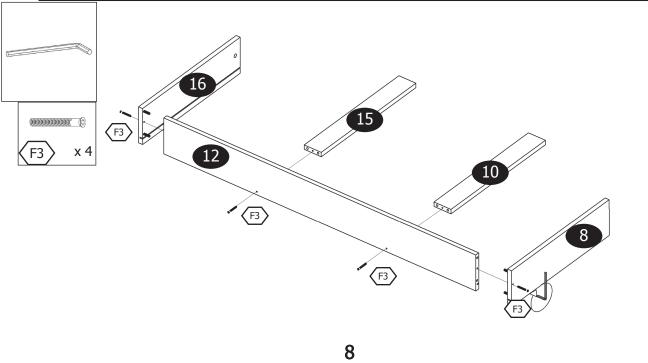

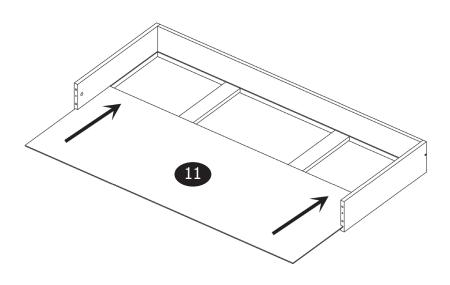

APRO Group LTD - Bed Page 5/6

