









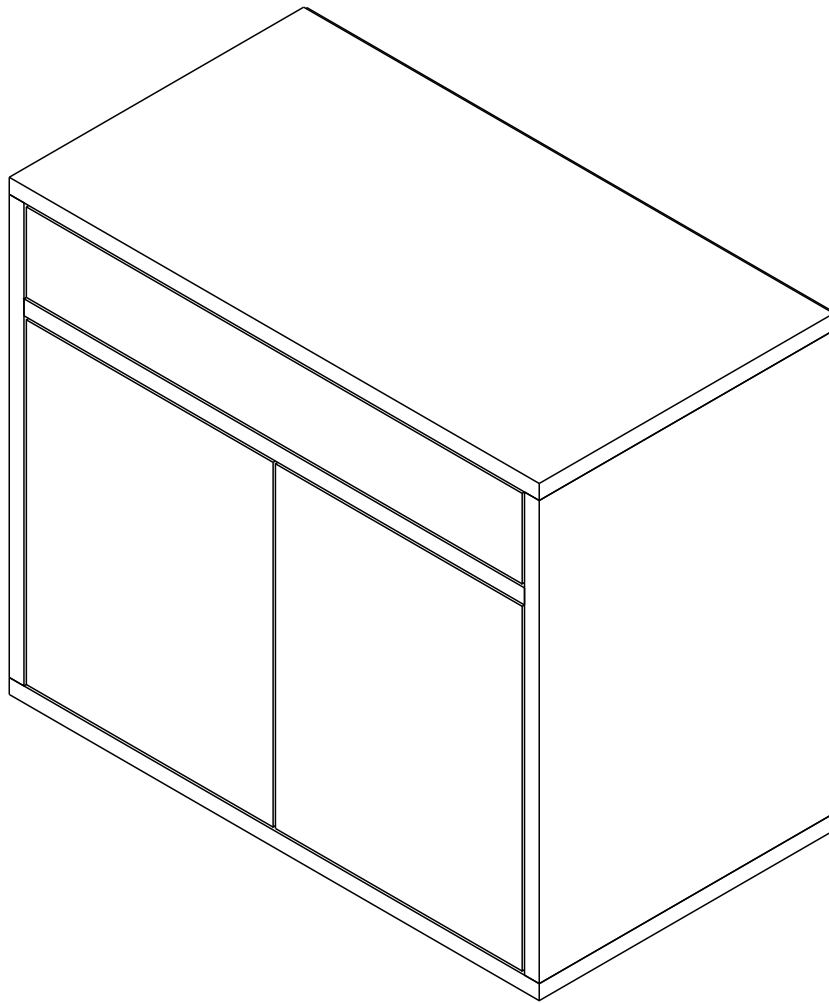













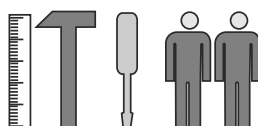
# ZONDA - Z04

## Komoda




1  x18	2  15x12 x6	3  15x16 x12	4  8x35 x22	10  x60	12  L=350 x2
5  x1	7  x22	8  7x50 x2	9  x12	11  x4	13  x4
14  x1	15  x2	16  x2	17  3,5x16 x20	18  3x13 x3	19  3,5x20 x4
			22  3,5x13 x4	21  L=415 x3	20  x1


Czas mont. - 120 min.












# ZONDA - Z04

## Komoda

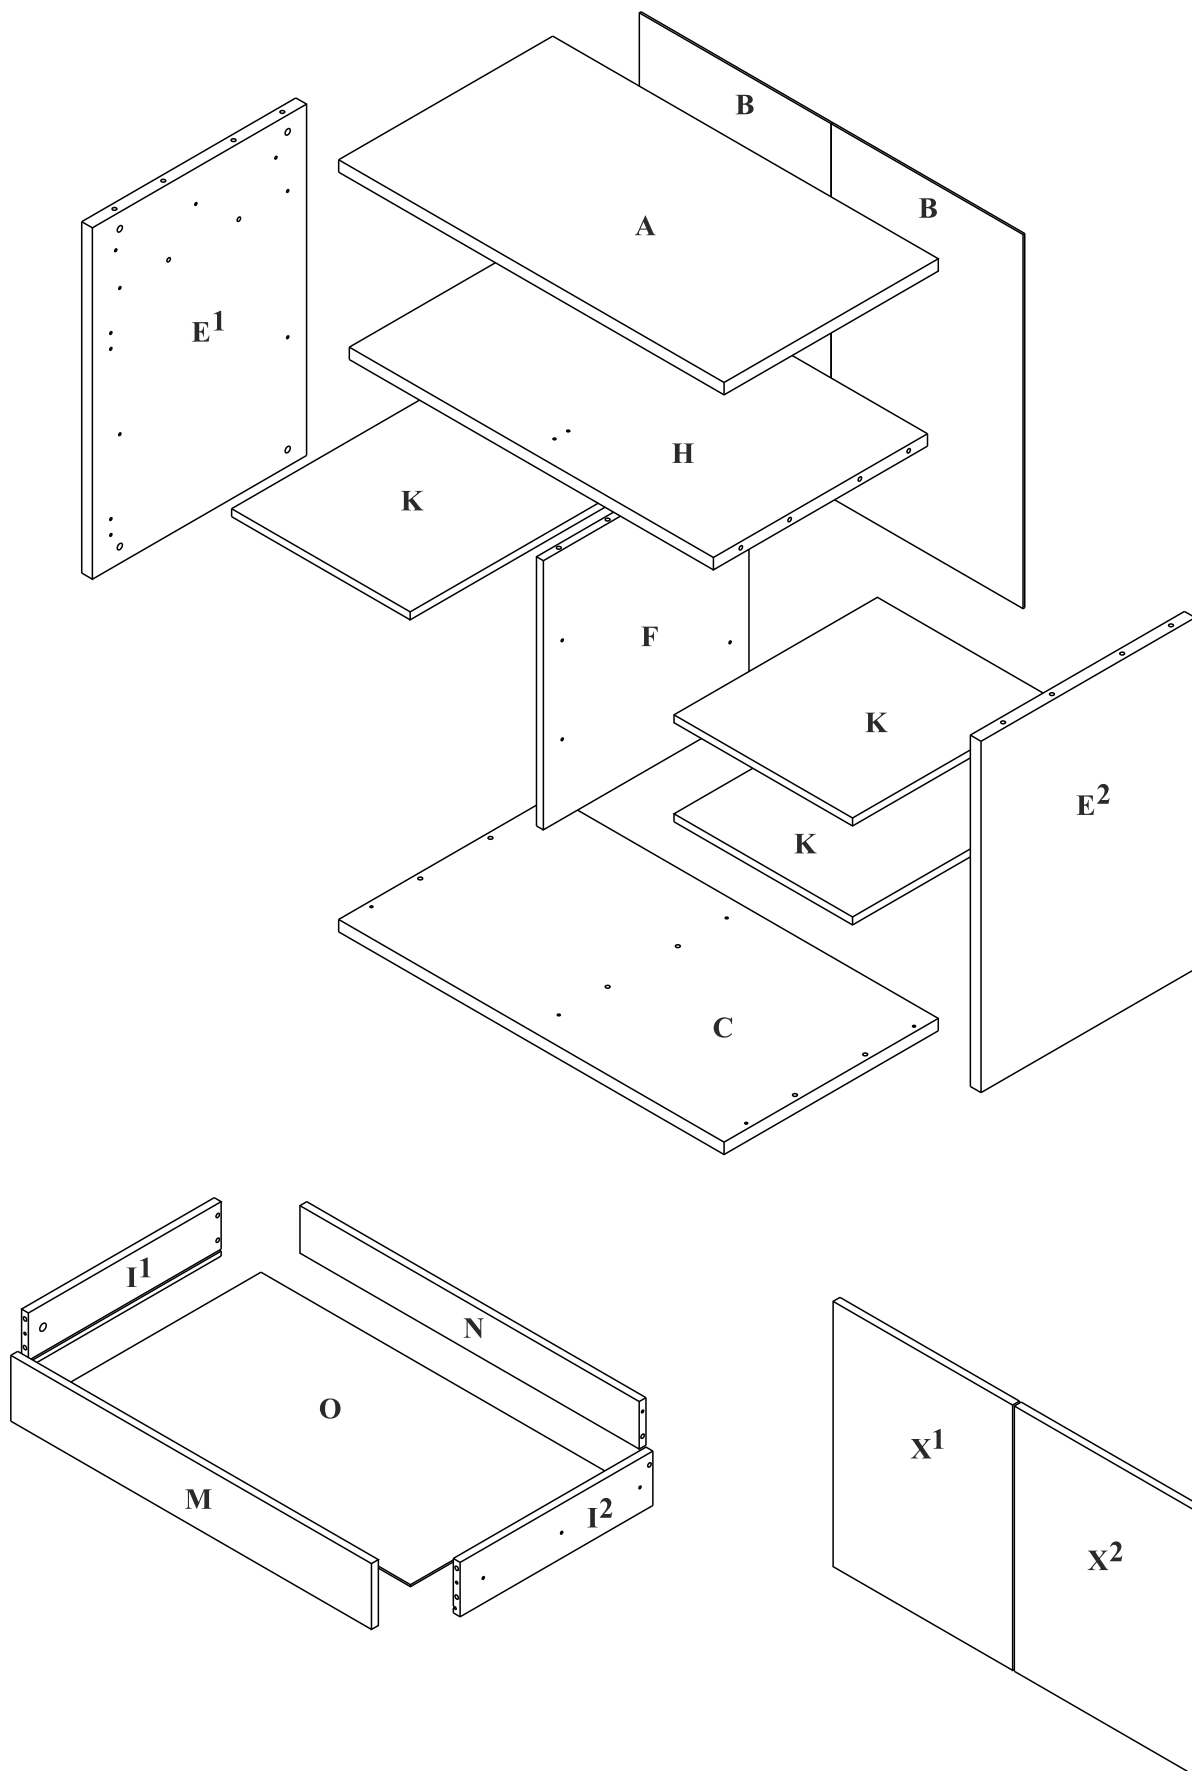



1

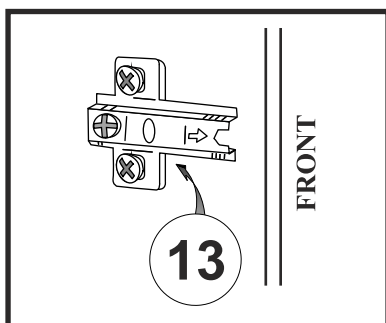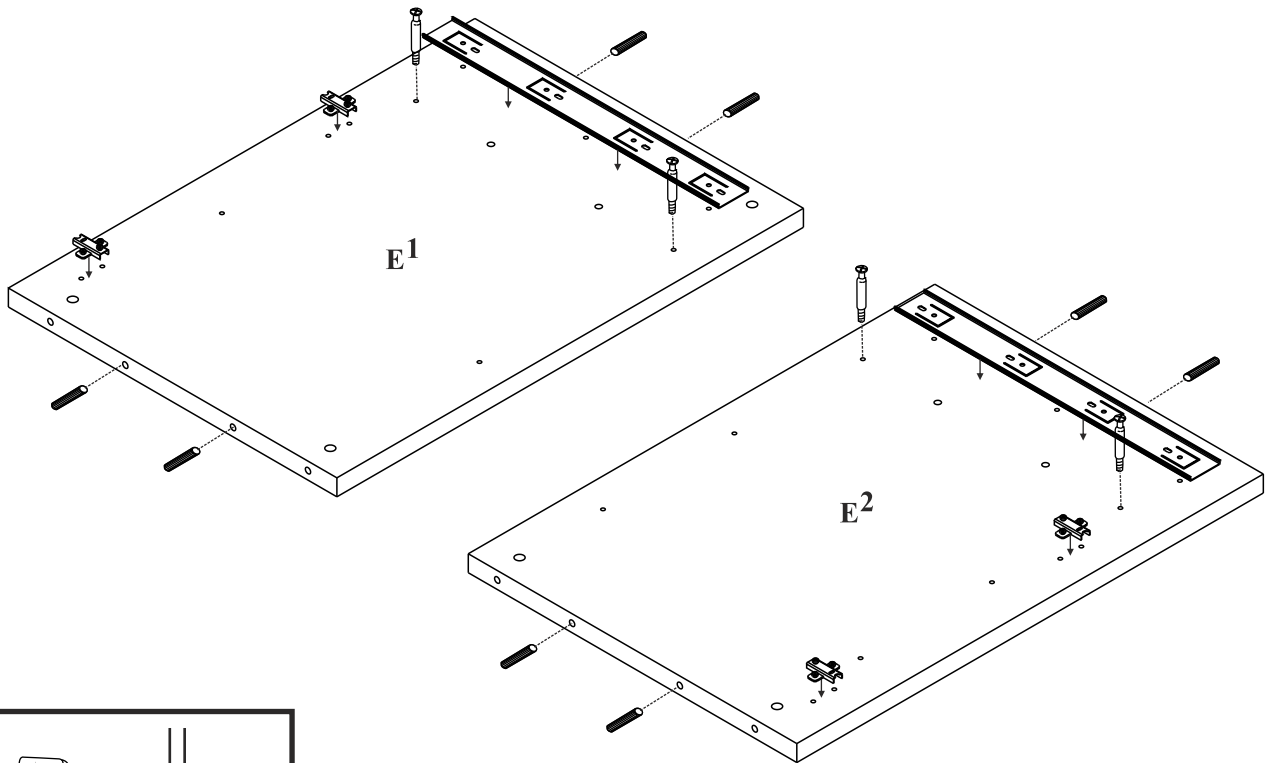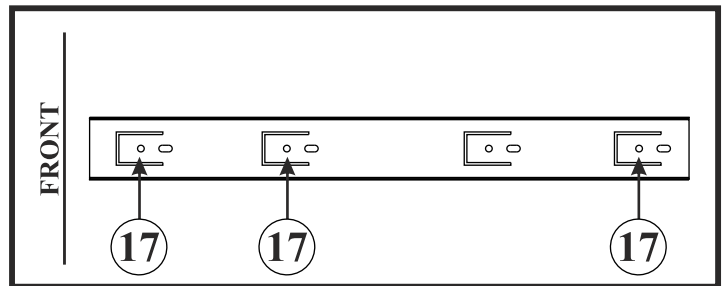

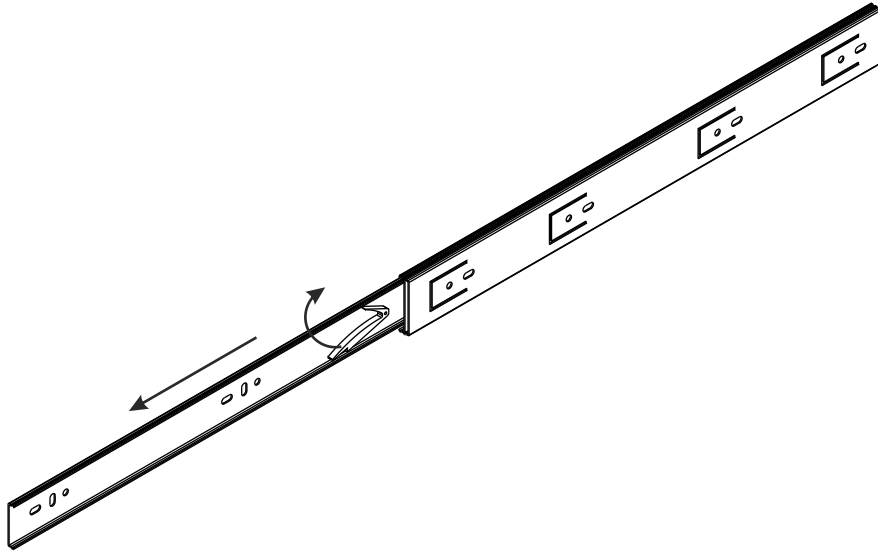


2

3

4 8x35  
x4

21 L=415  
x3

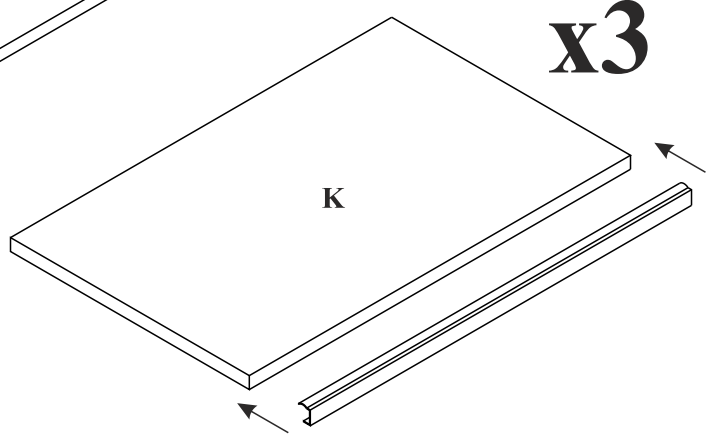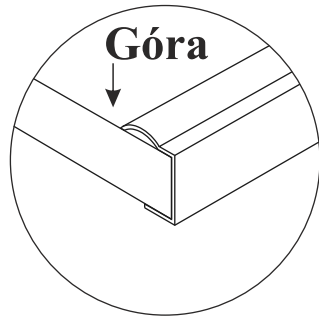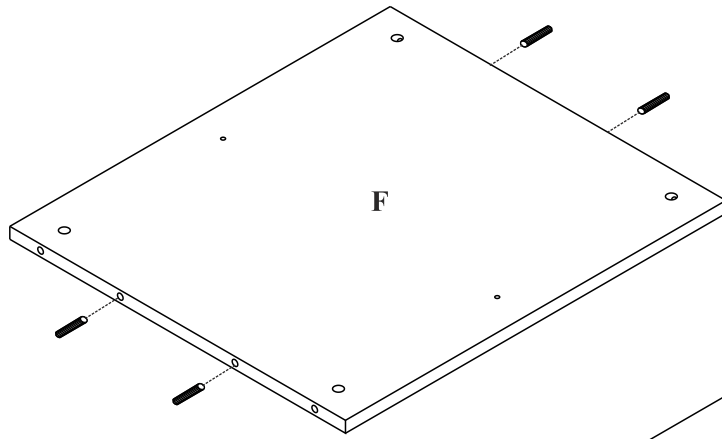

4

4 8x35  
x4



1  
x2



15  
x2

14  
x1



19 3,5x20  
x4

18 3x13  
x2

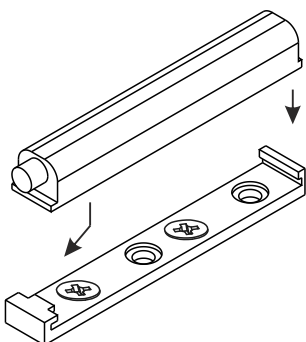
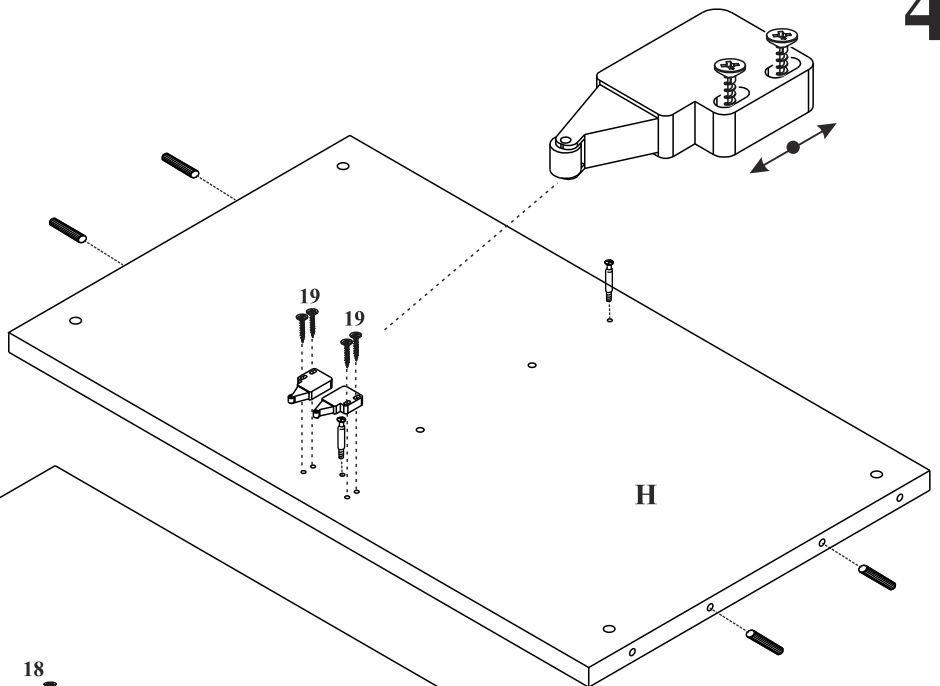


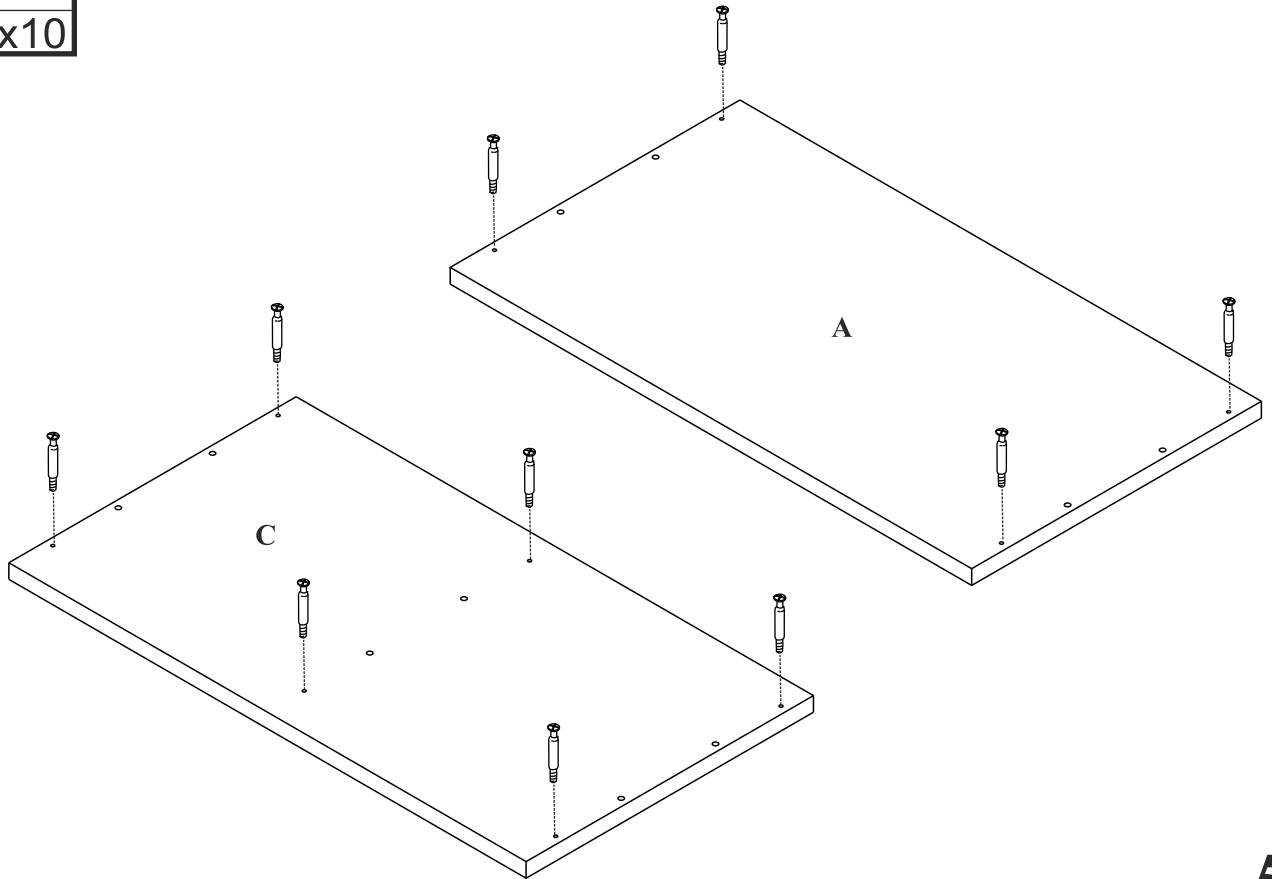





5

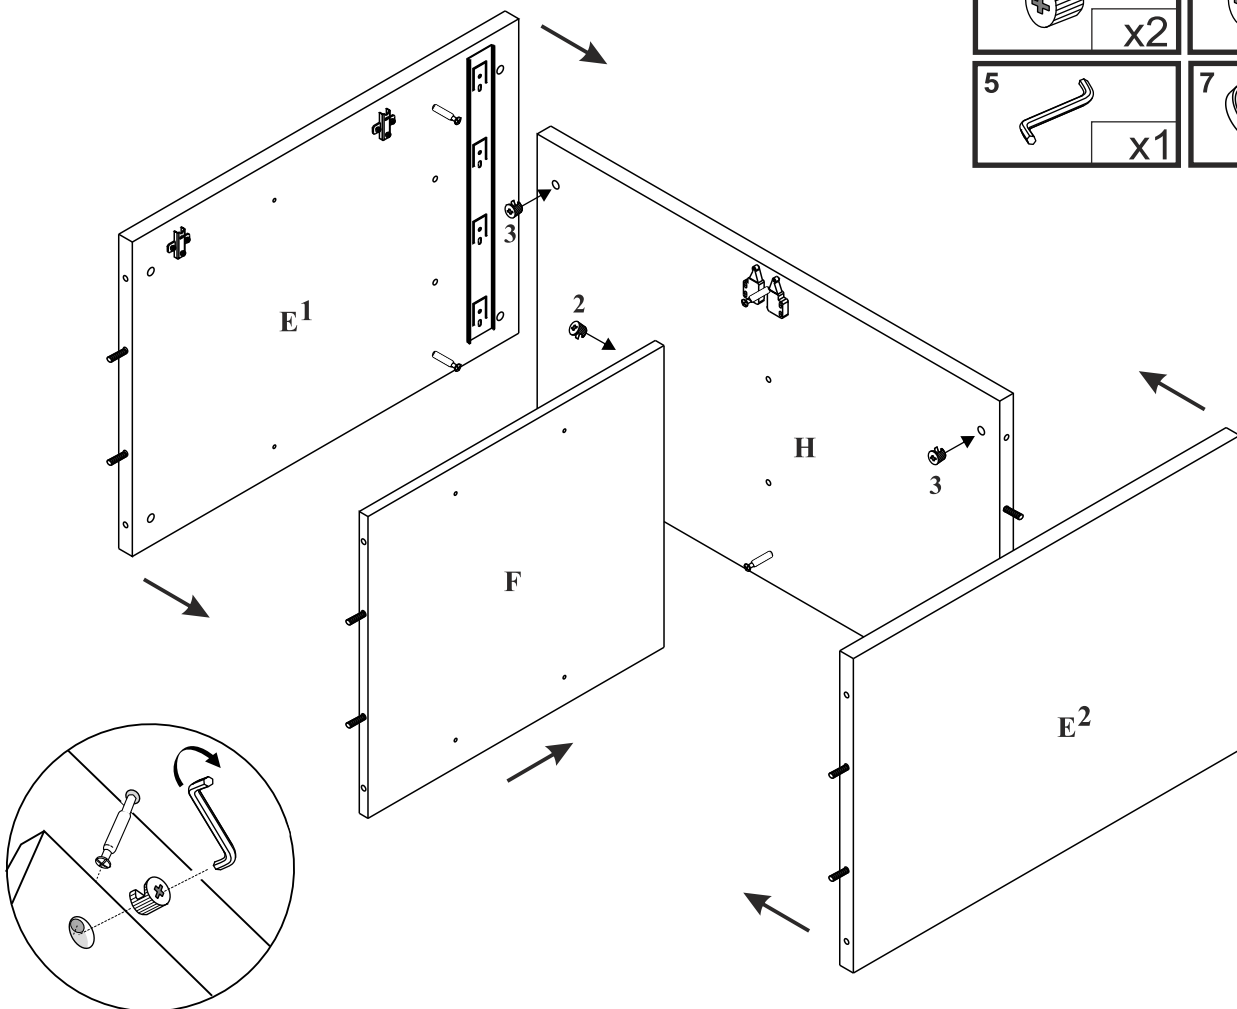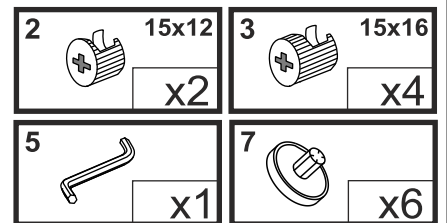




6

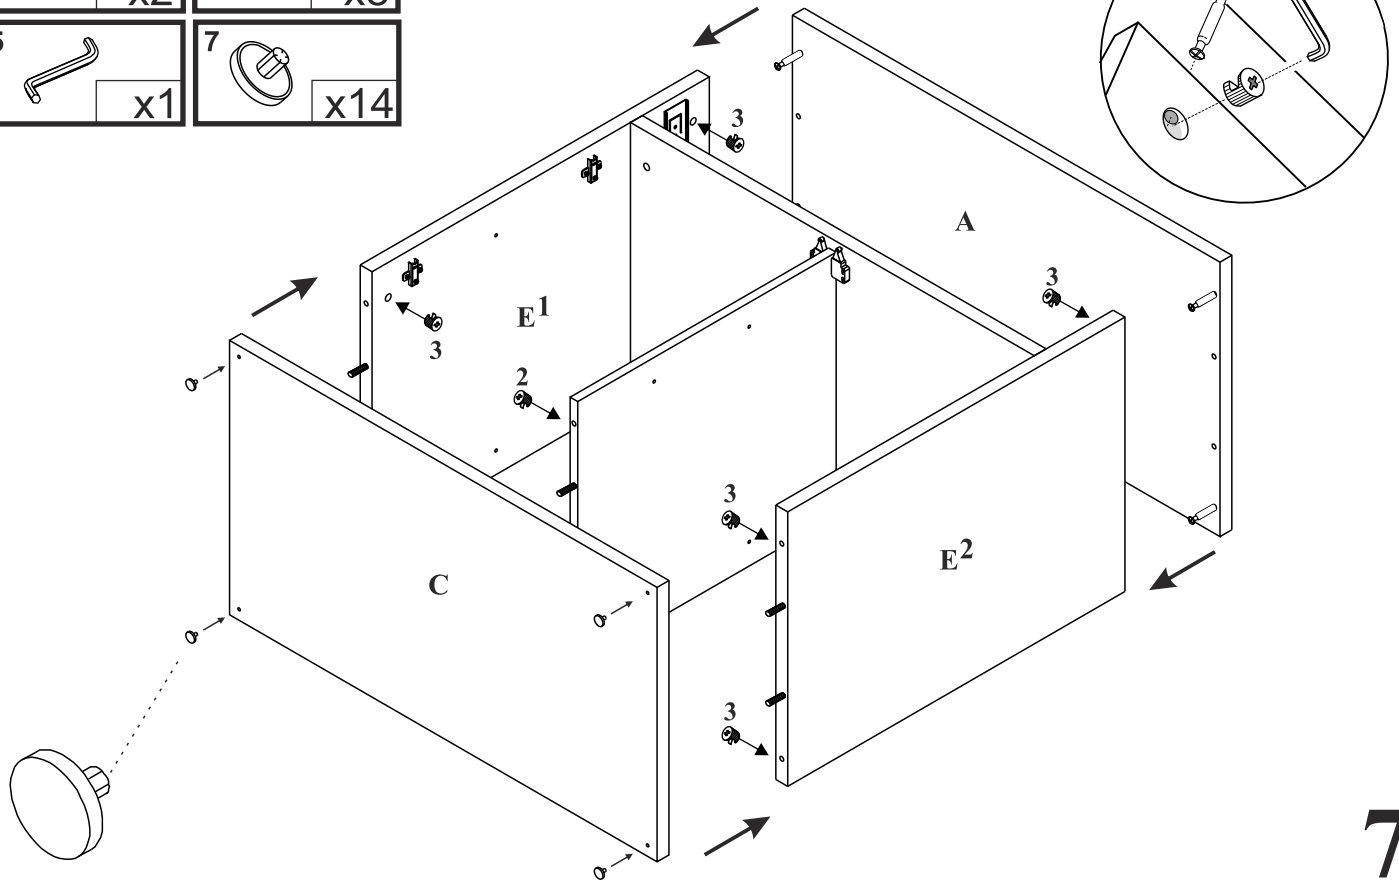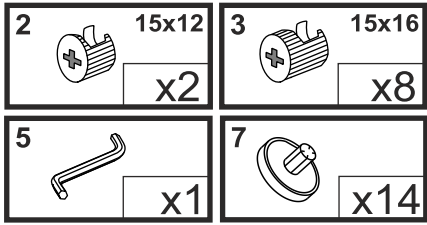




7

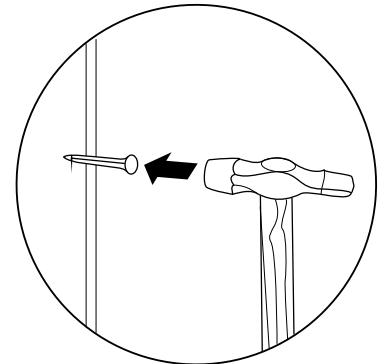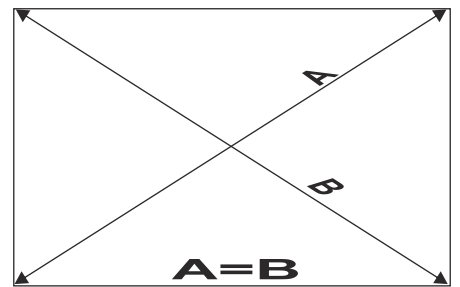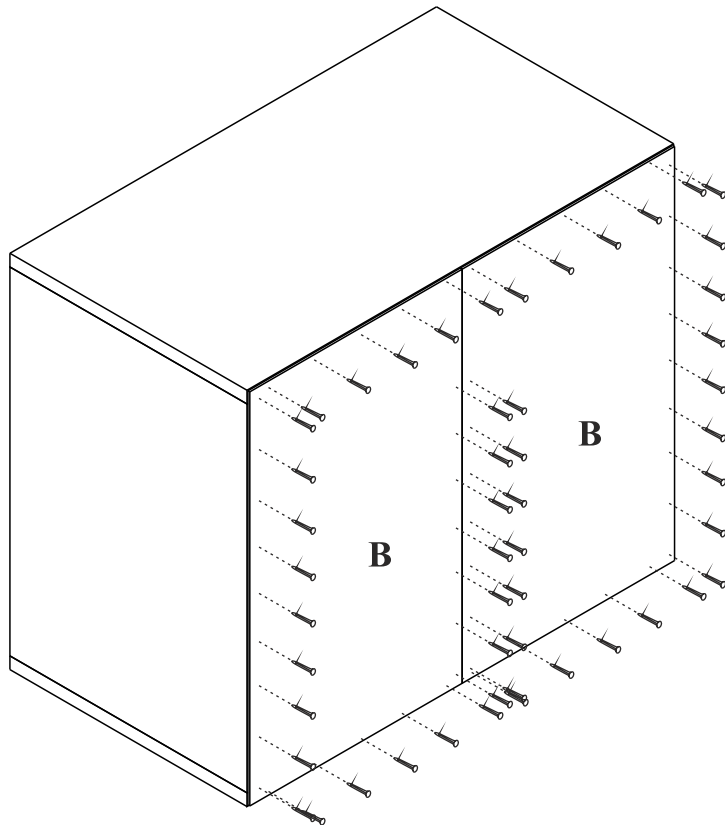


8

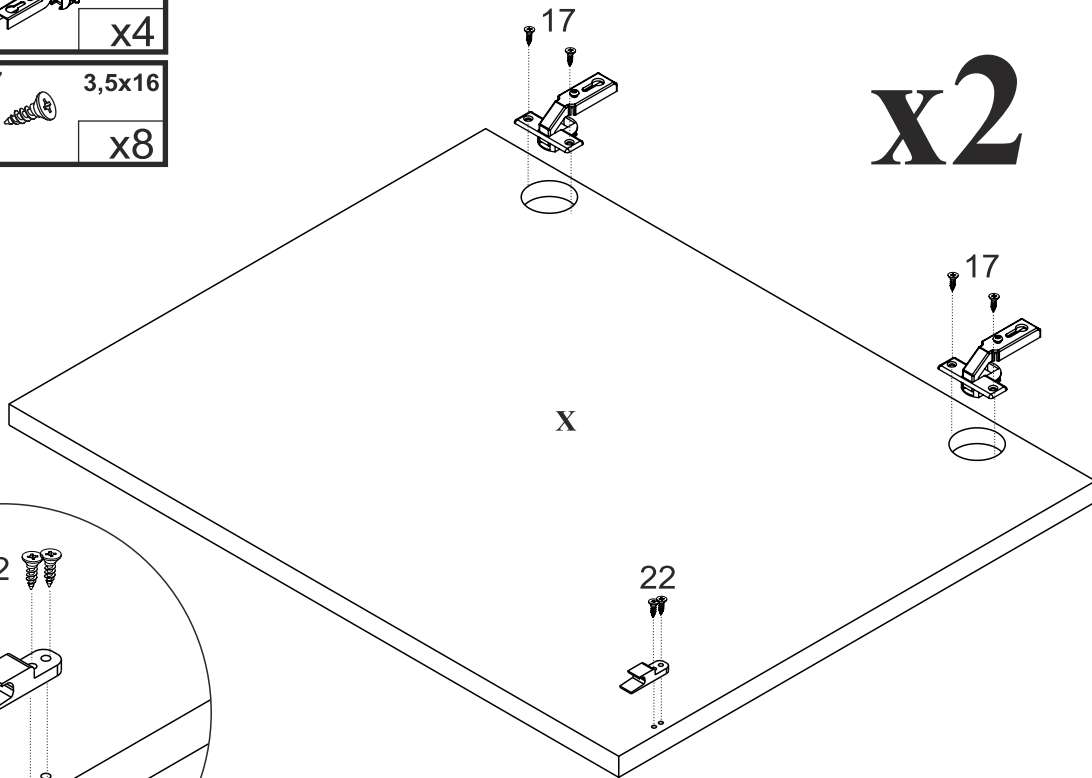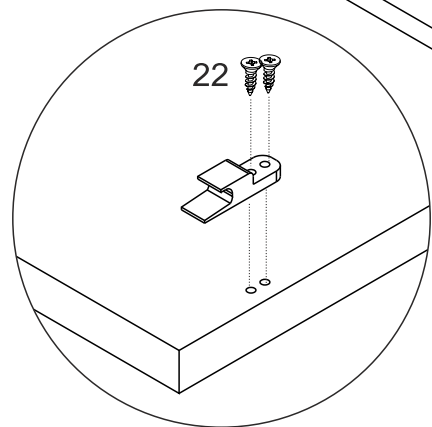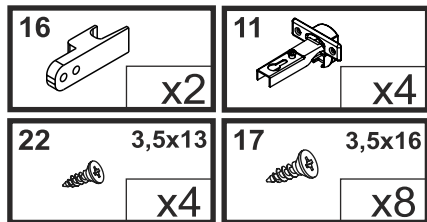


9

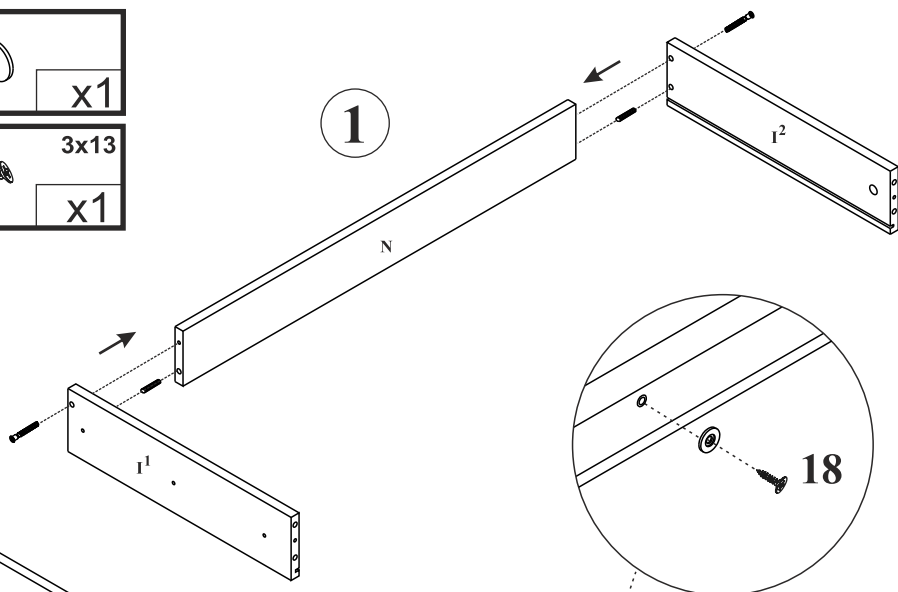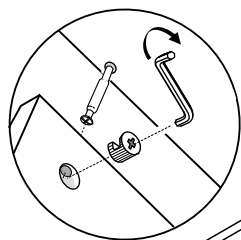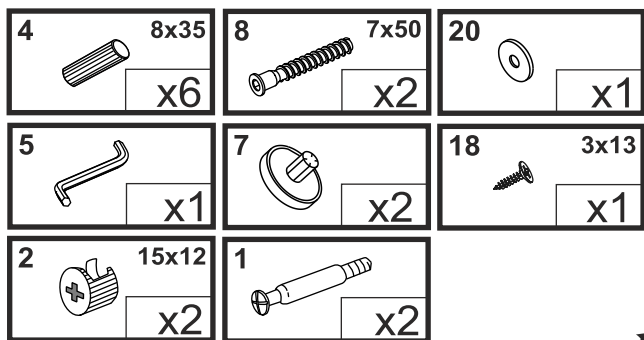


2


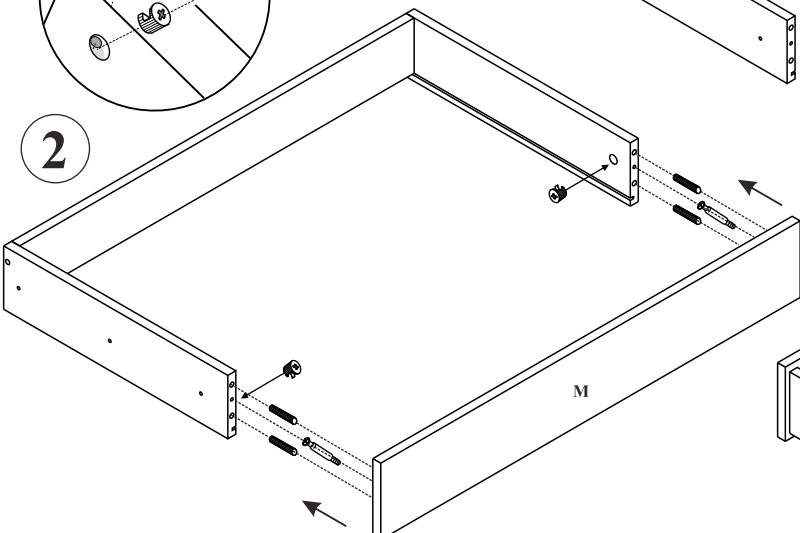


3

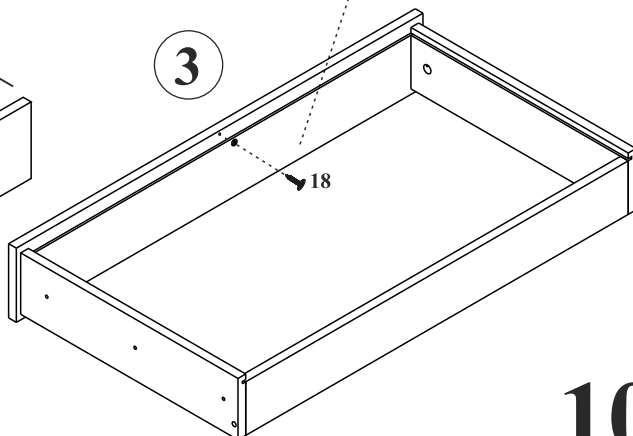



10


10  x10

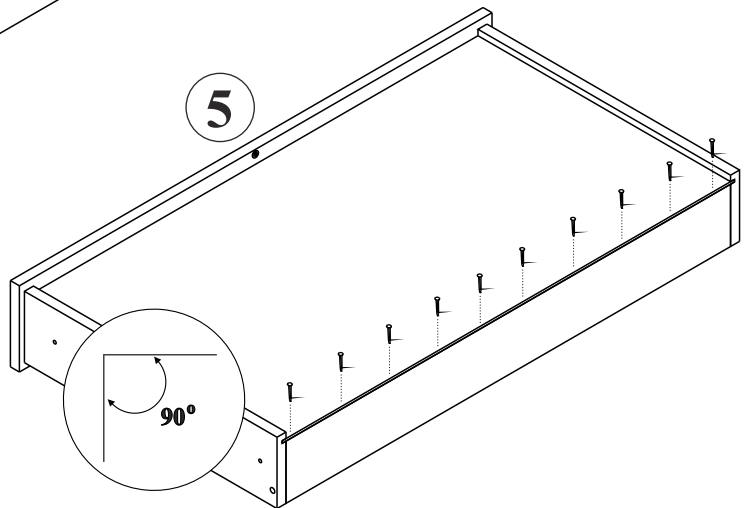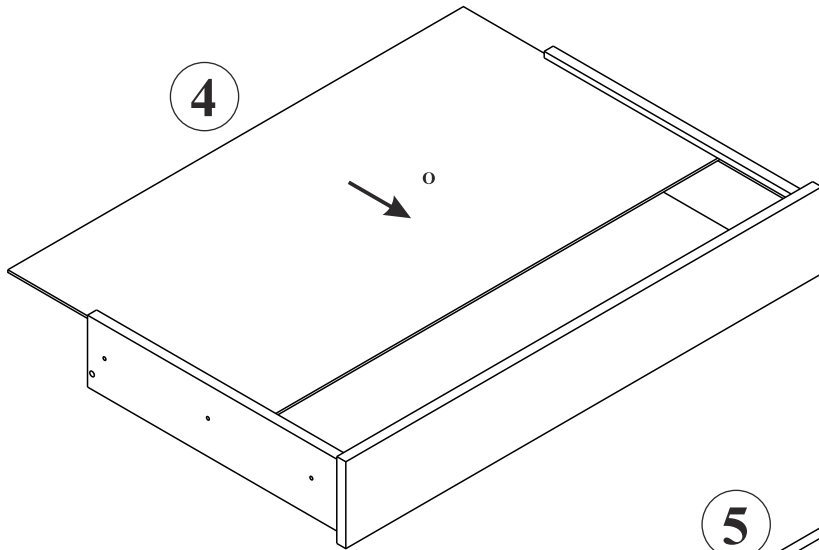


11

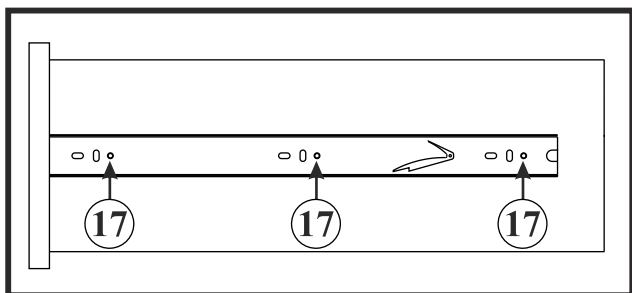

12  x2



17  3,5x16 x6

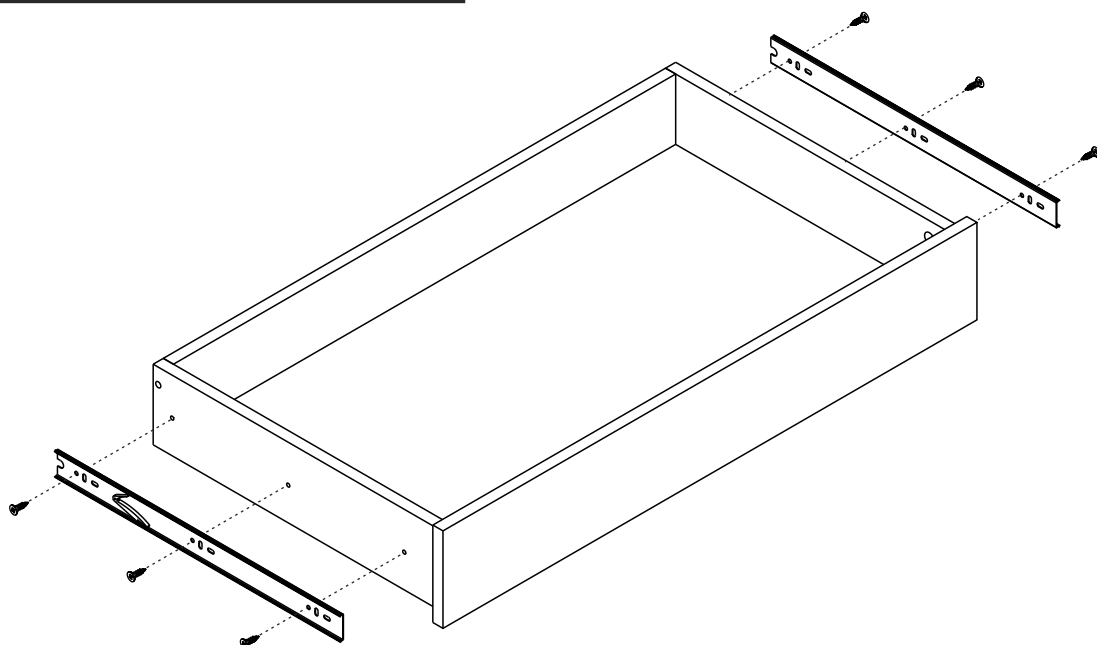



12






9 x12

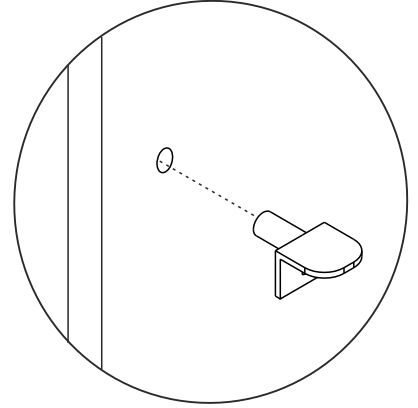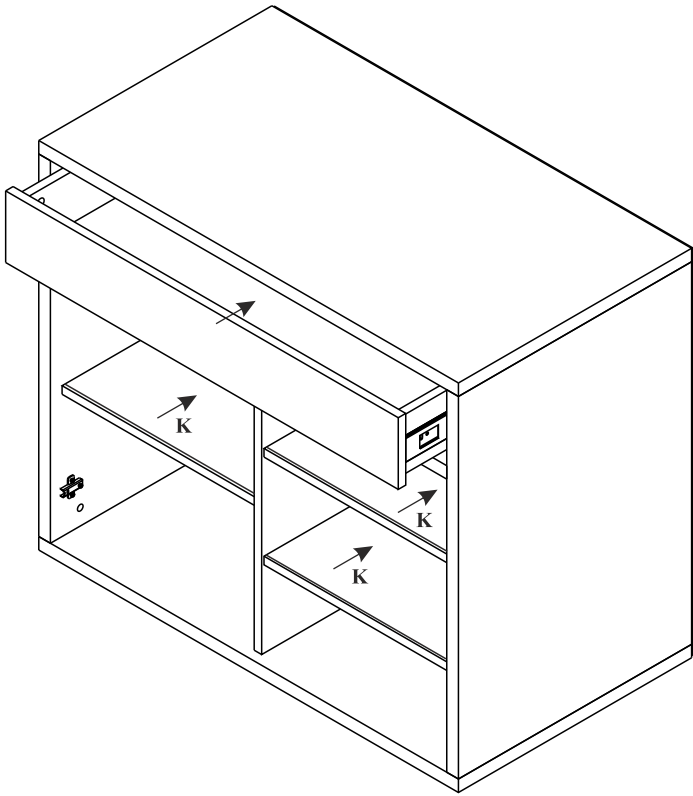




13

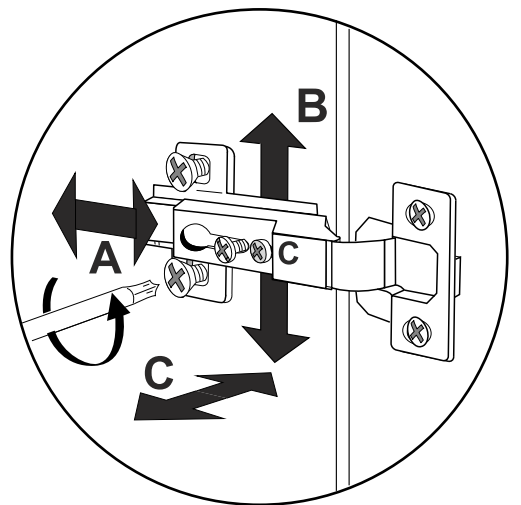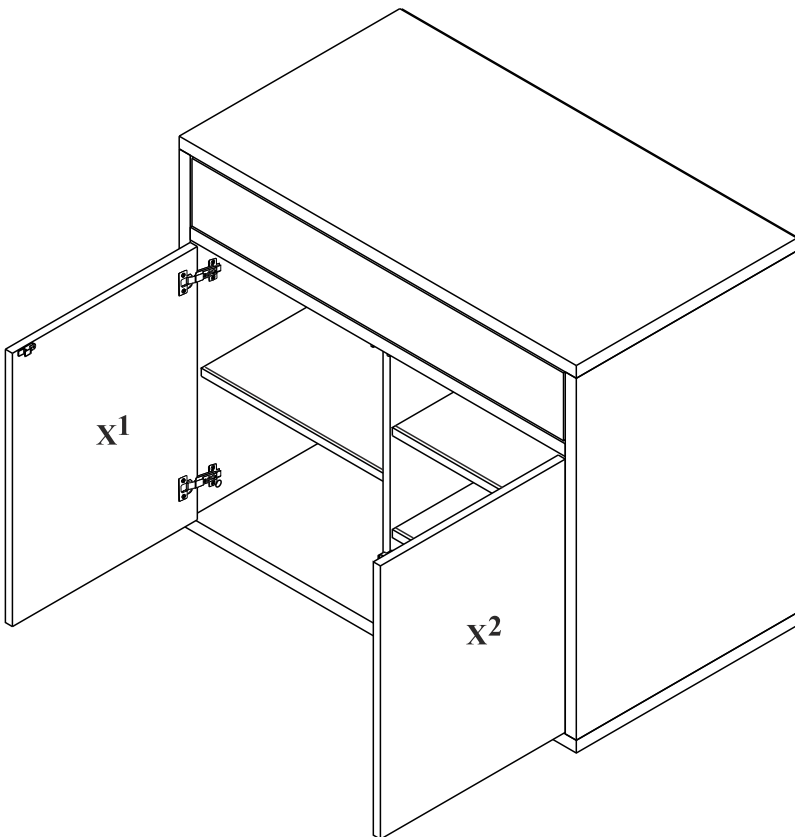

14

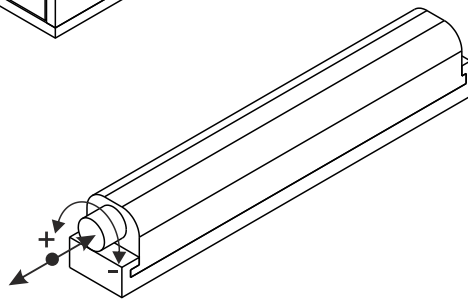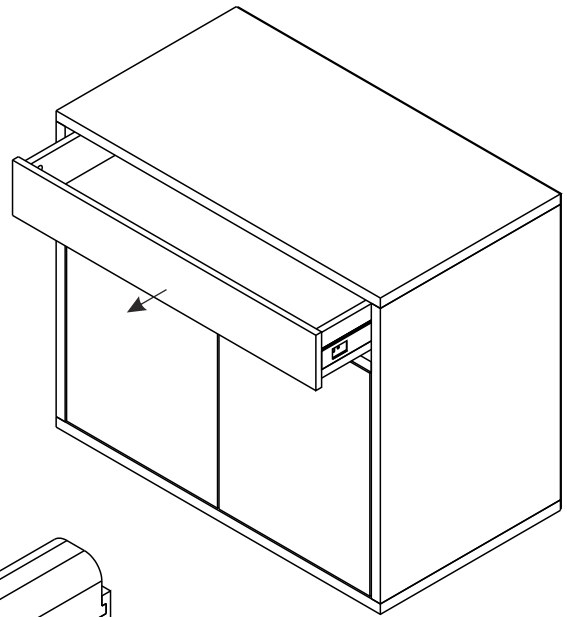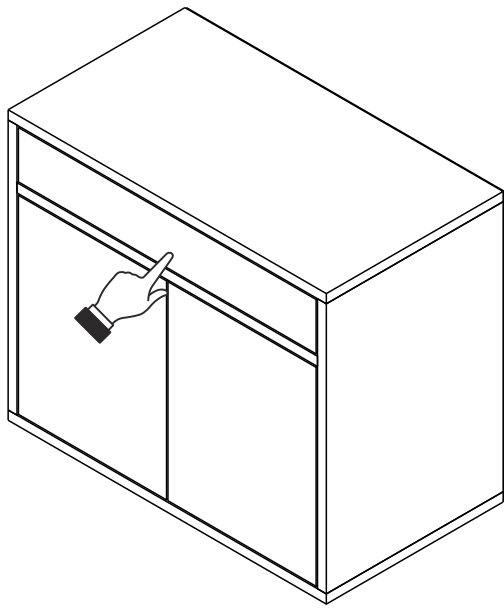

15

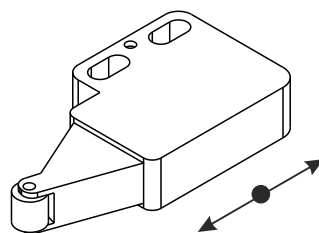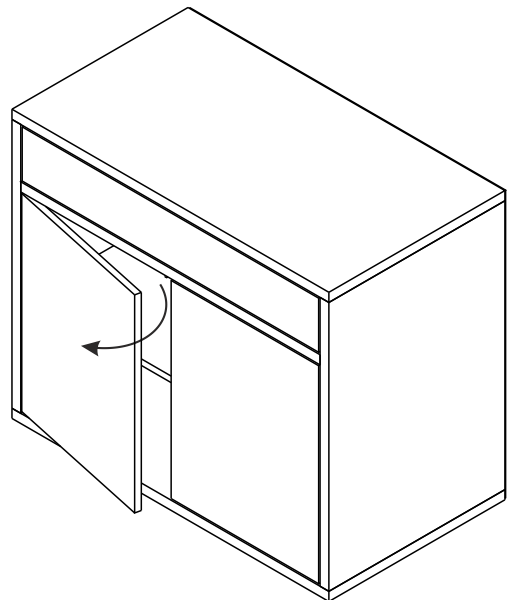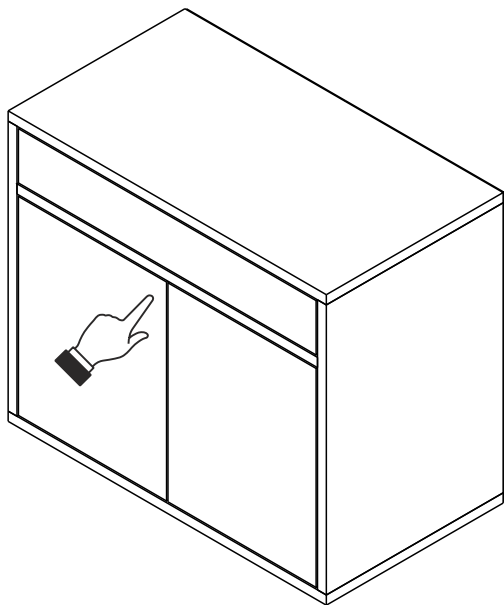

16