





HUBERTUS DESIGN

- | | |
|----------------------------------|------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (TR) Montaj talimatı | (RU) Инструкция по монтажу |
| (RO) Instrucțiunile asamblare | (CZ) Montážní návod |
| (IT) Istruzioni per il montaggio | (FR) Instructions de montage |
| (SK) Montážny návod | (HU) Szerelési útmutató |


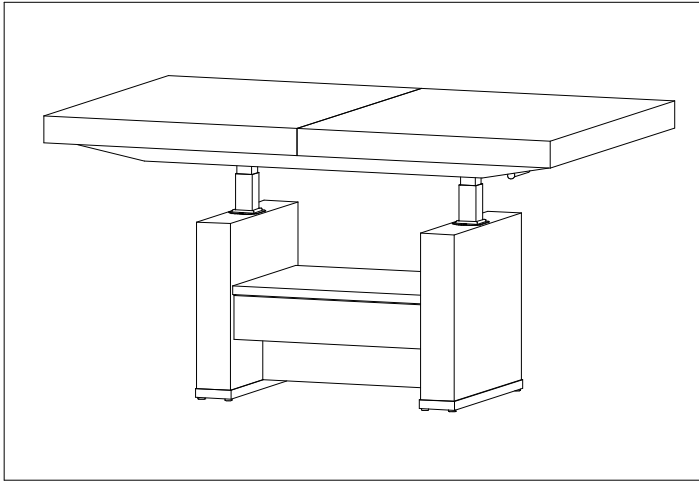





AVERSA LUX













03 - 10/2019

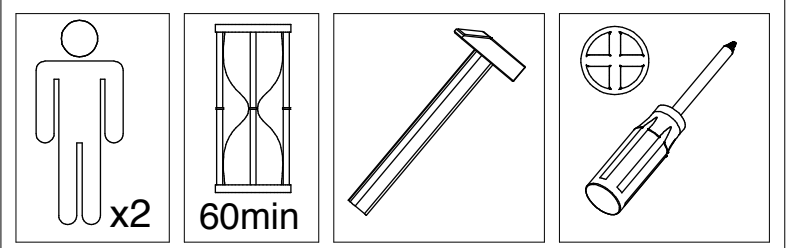



ew5 Euro 5x13	x48w14 Ø4x16	x4nw Ø10x13	x8zk Ø11	x8f filc	x4
s12 M6x12	x4s M6x12	x8w12 M4x14	x2l Ø8x30	x6ls Ø7,5x30	x8
t L-24	x17s35 M8x35	x2zm Ø17	x6m Ø15	x17k40 Ø5x40	x8
s45 M6x45	x8k50 Ø6,4x50	x2z3; z4; z5 L-shaped bracket	x1 ; x1 ; x1		

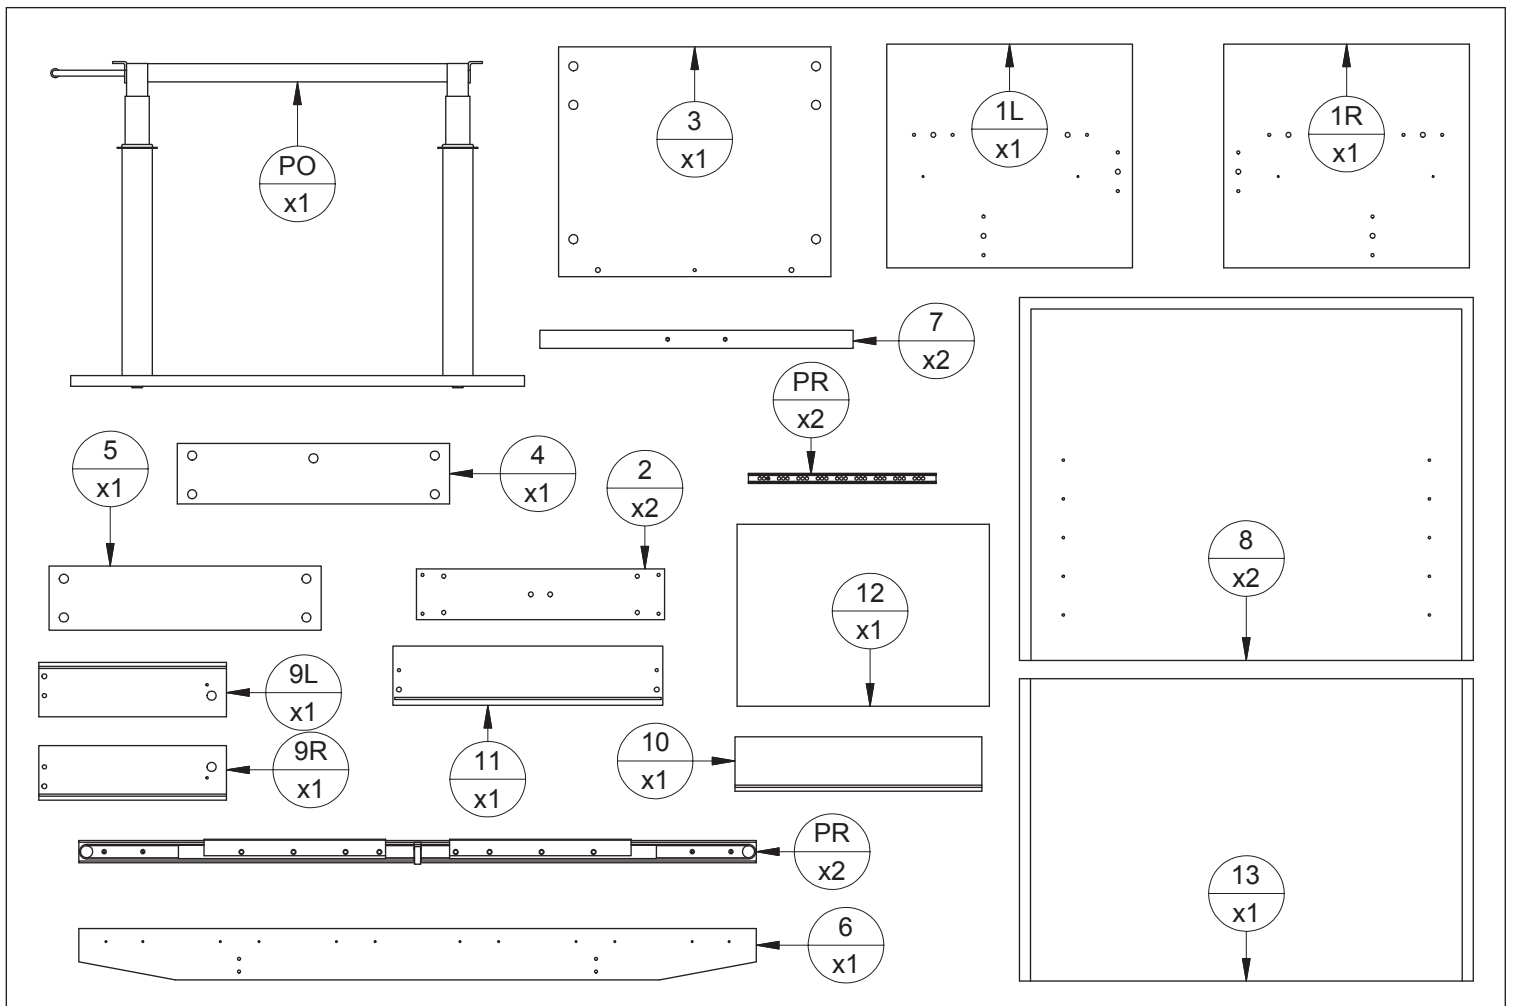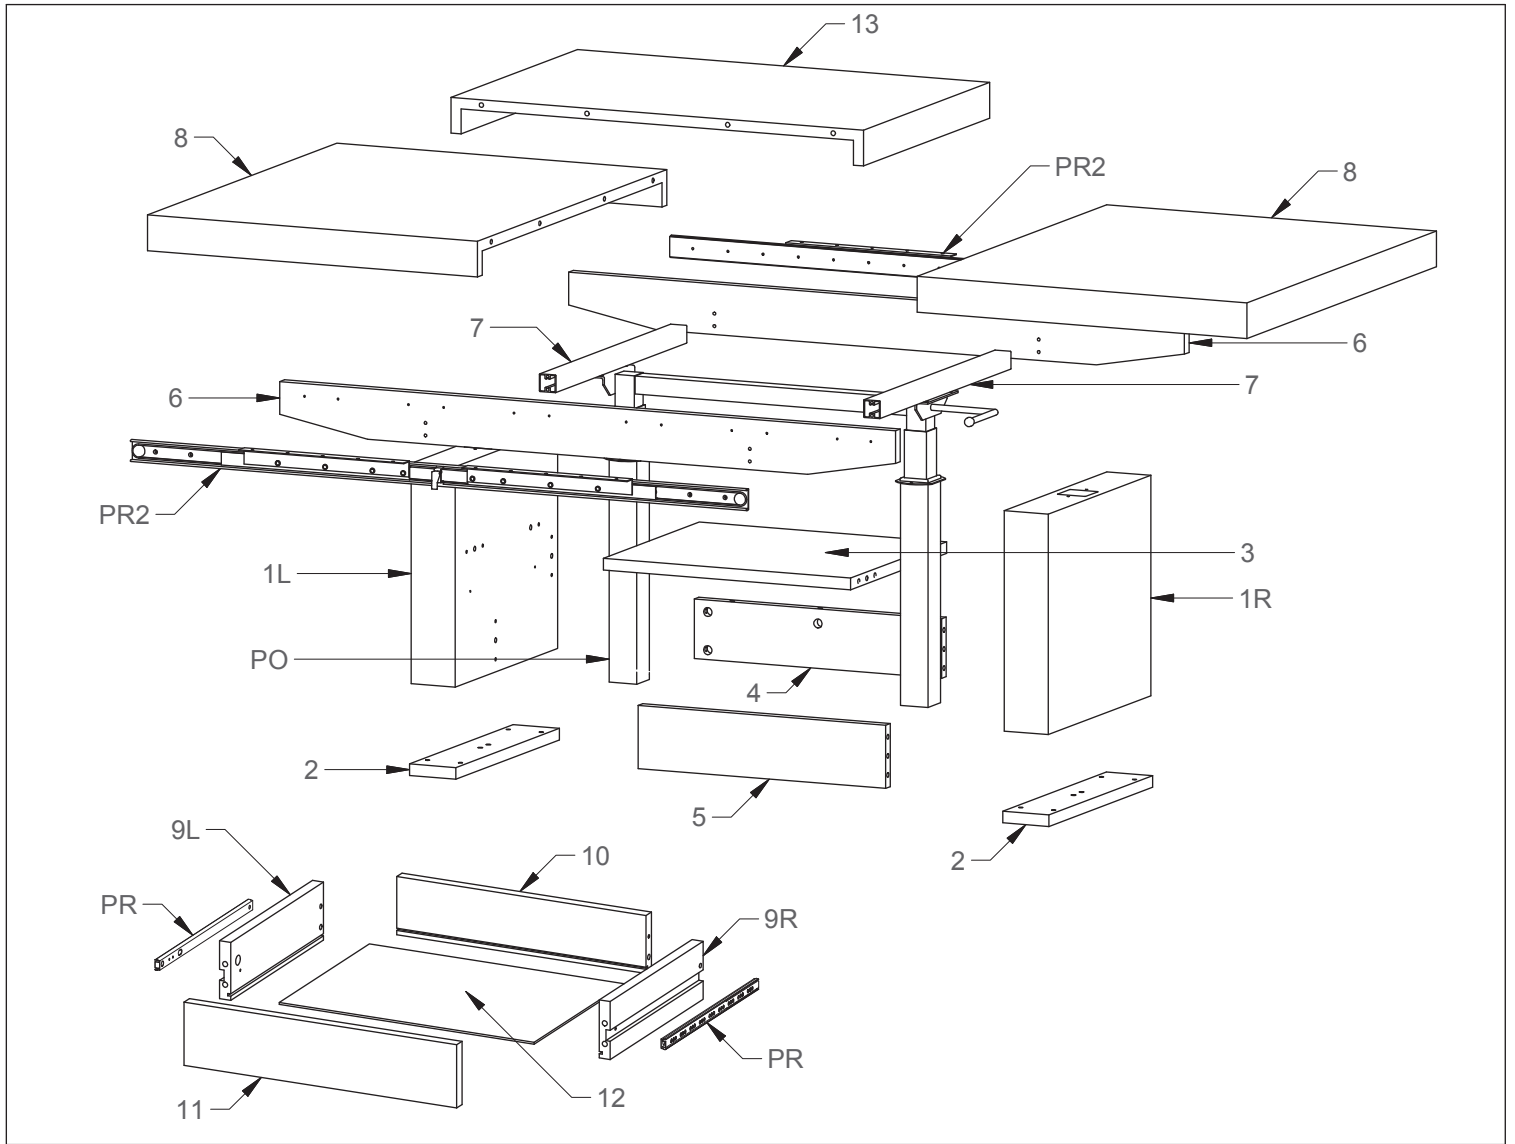

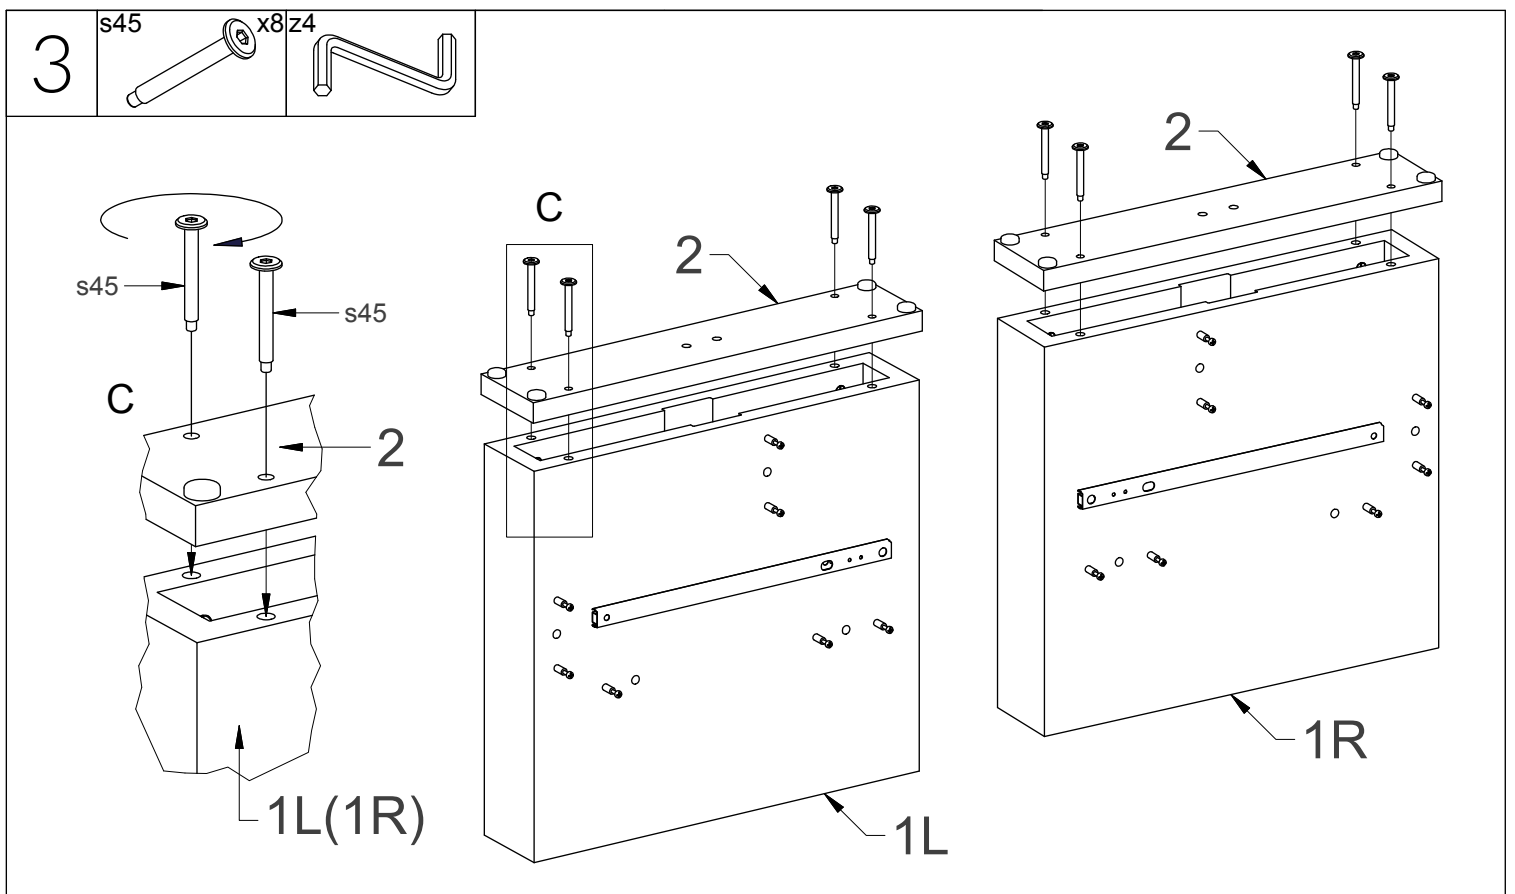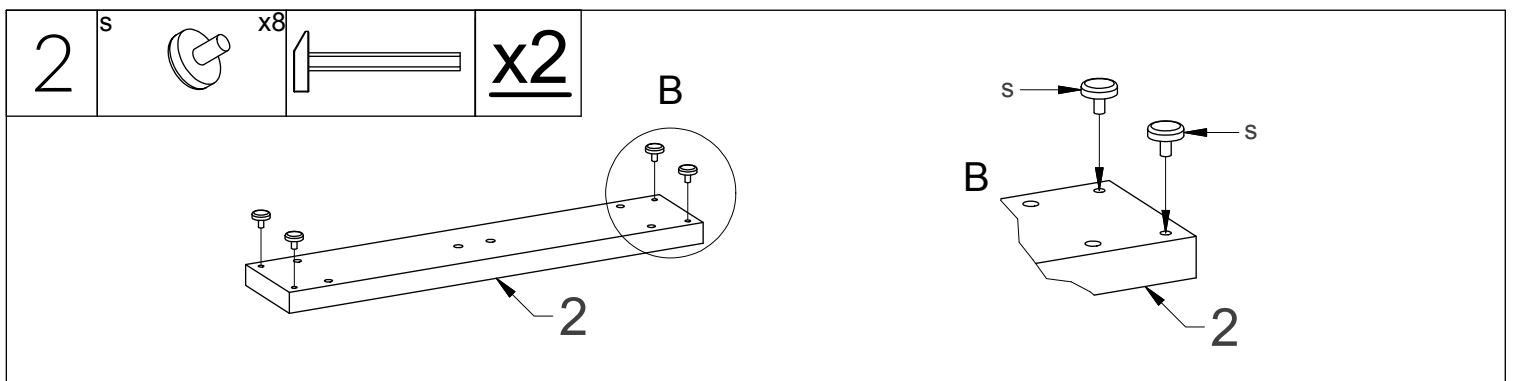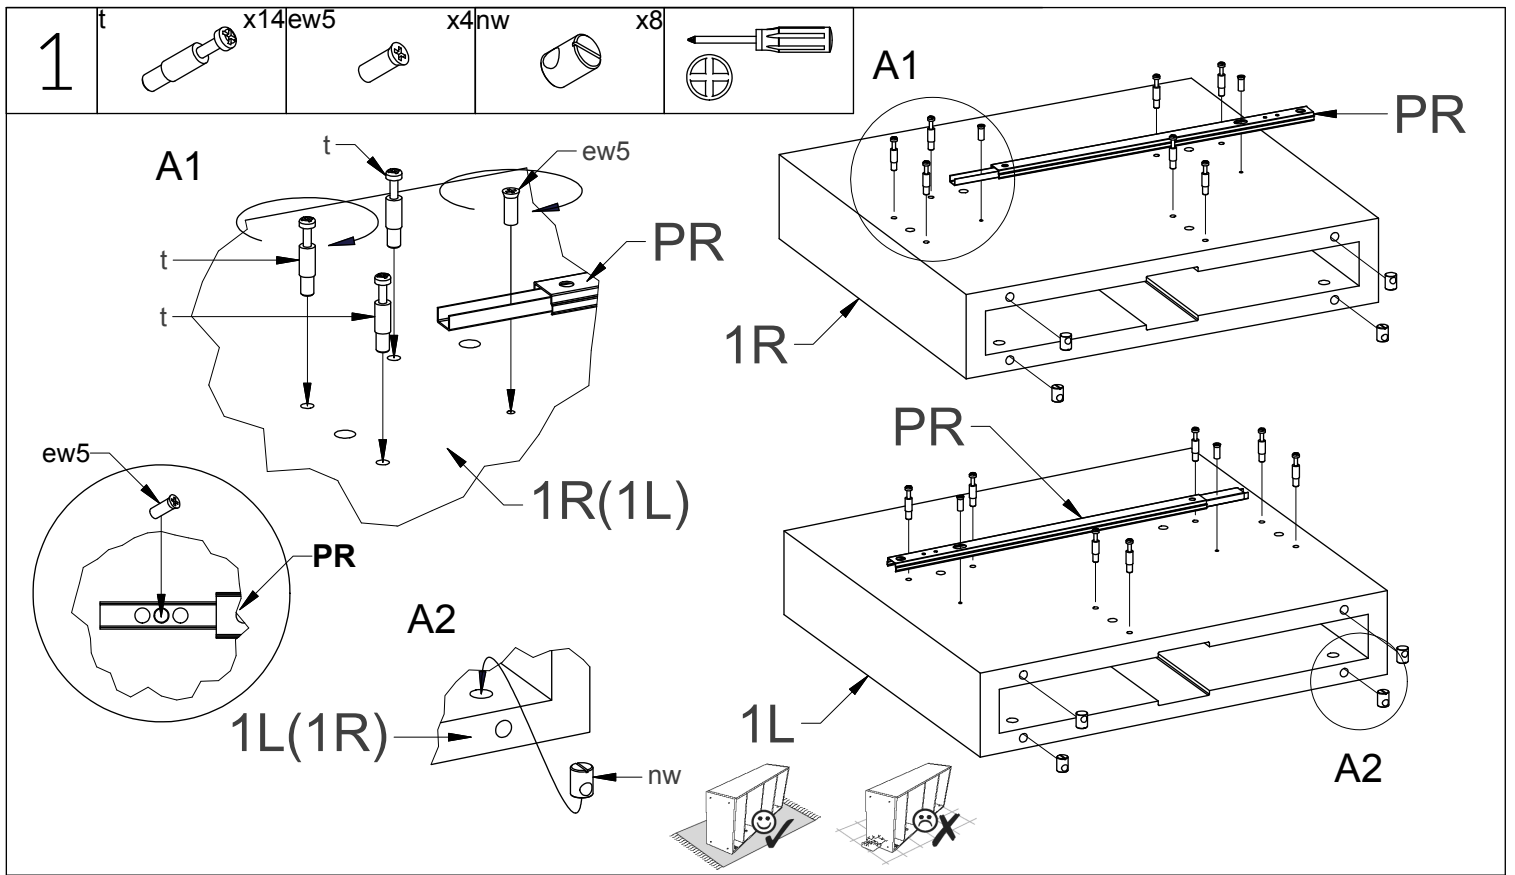

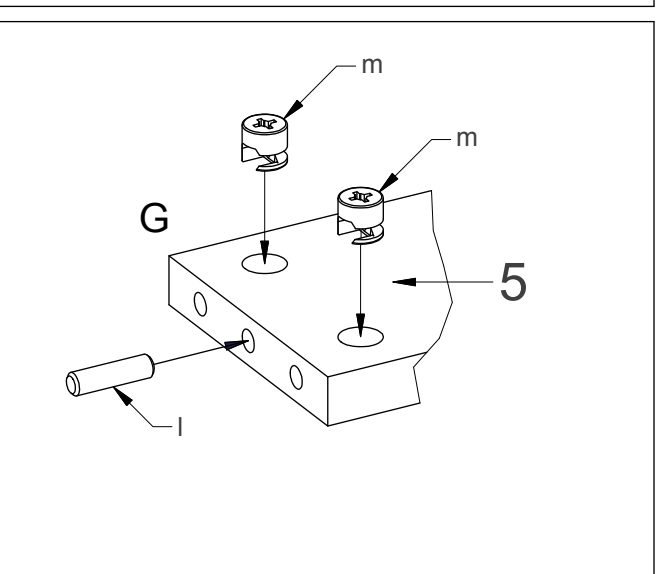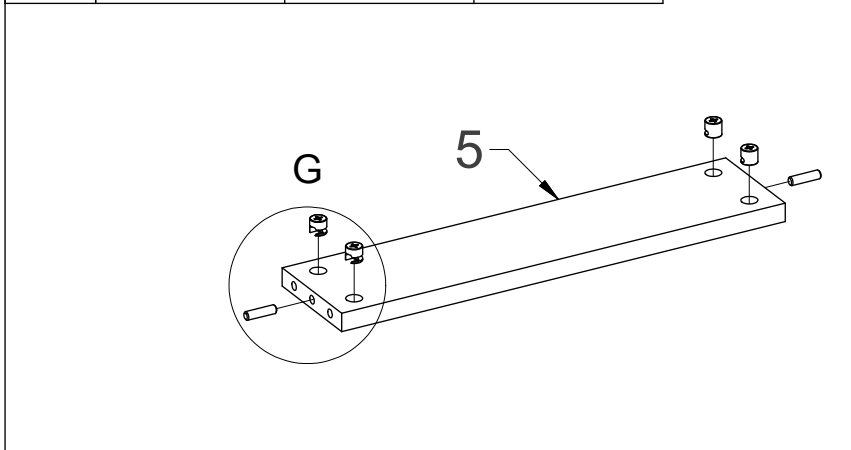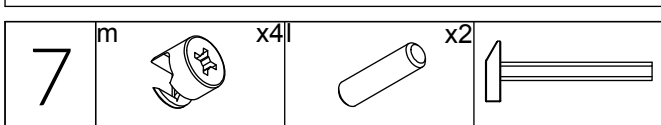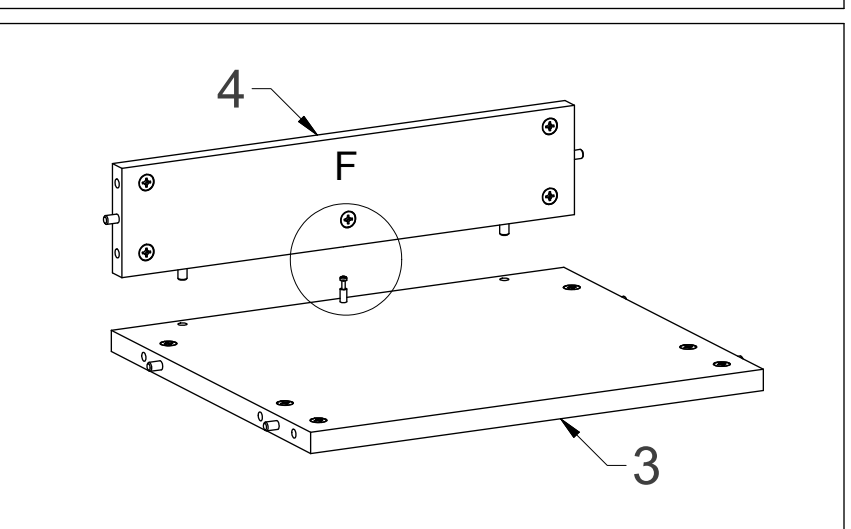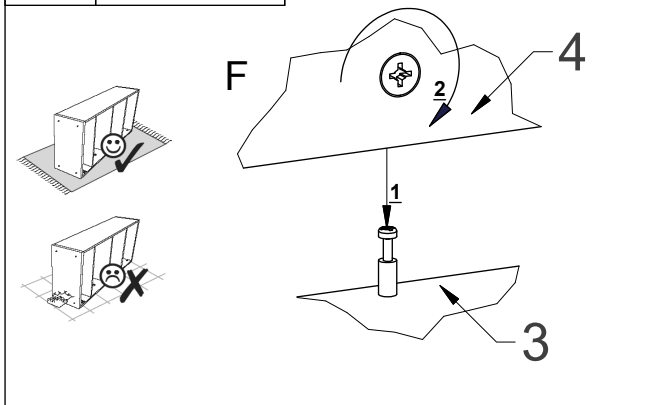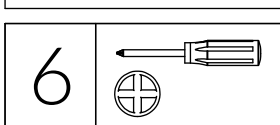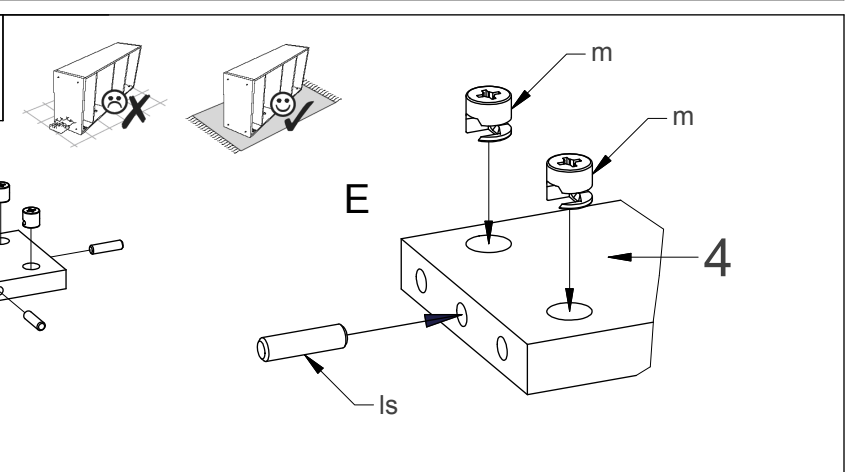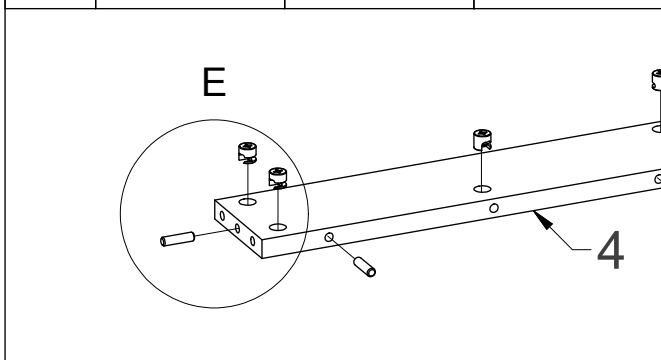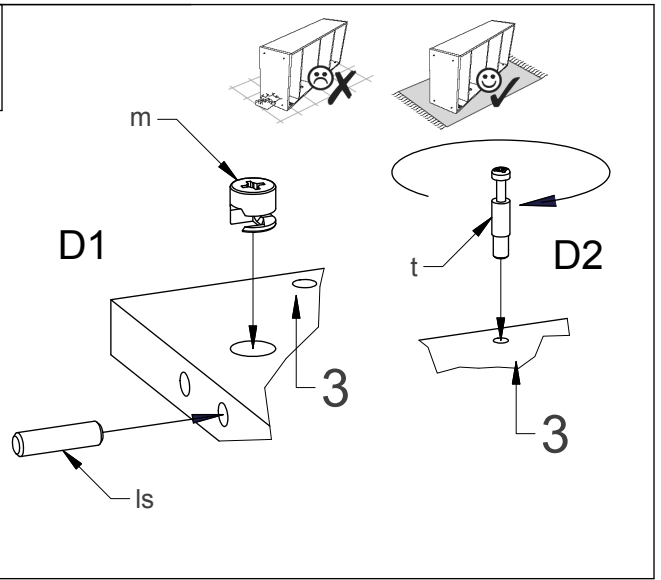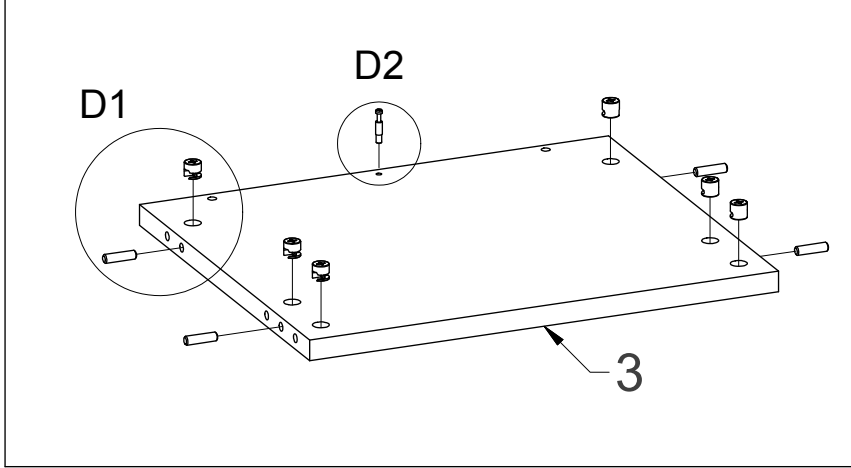


8

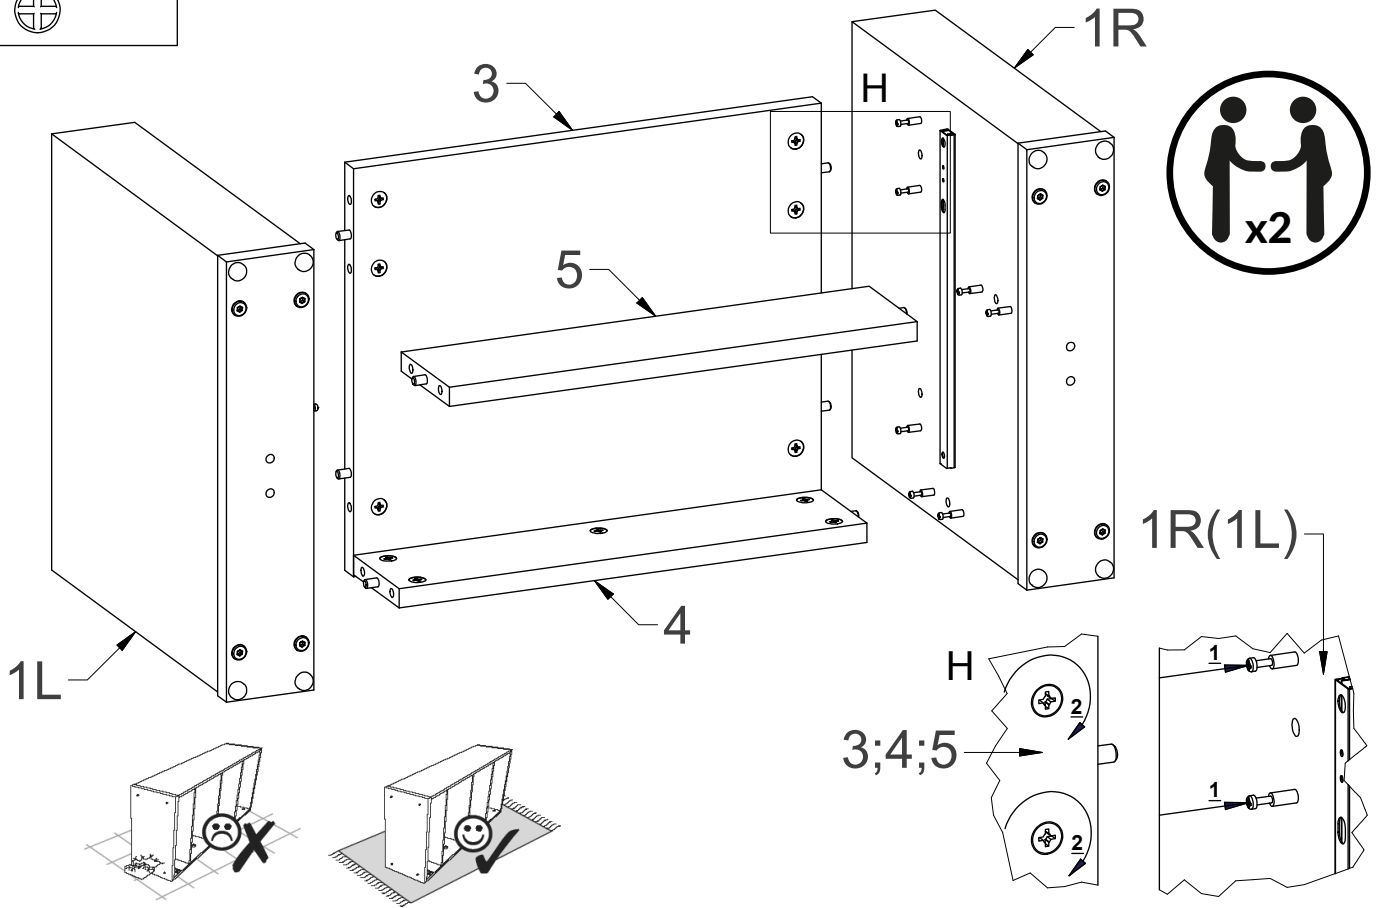





9

z5




x2

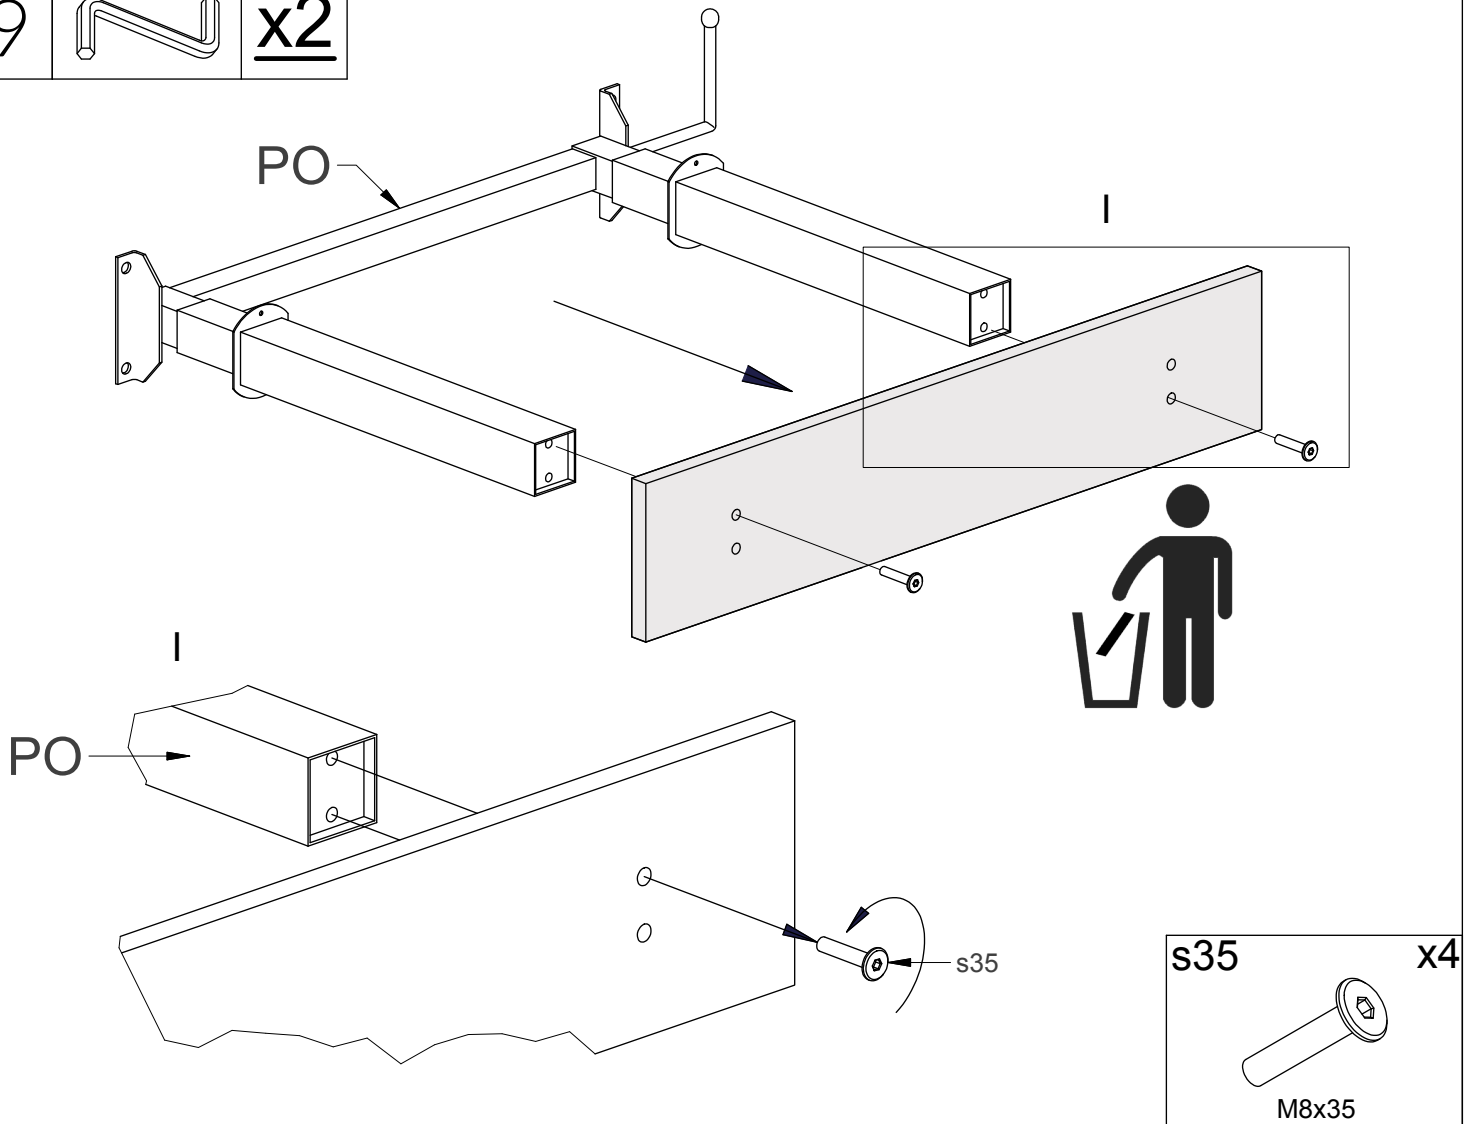

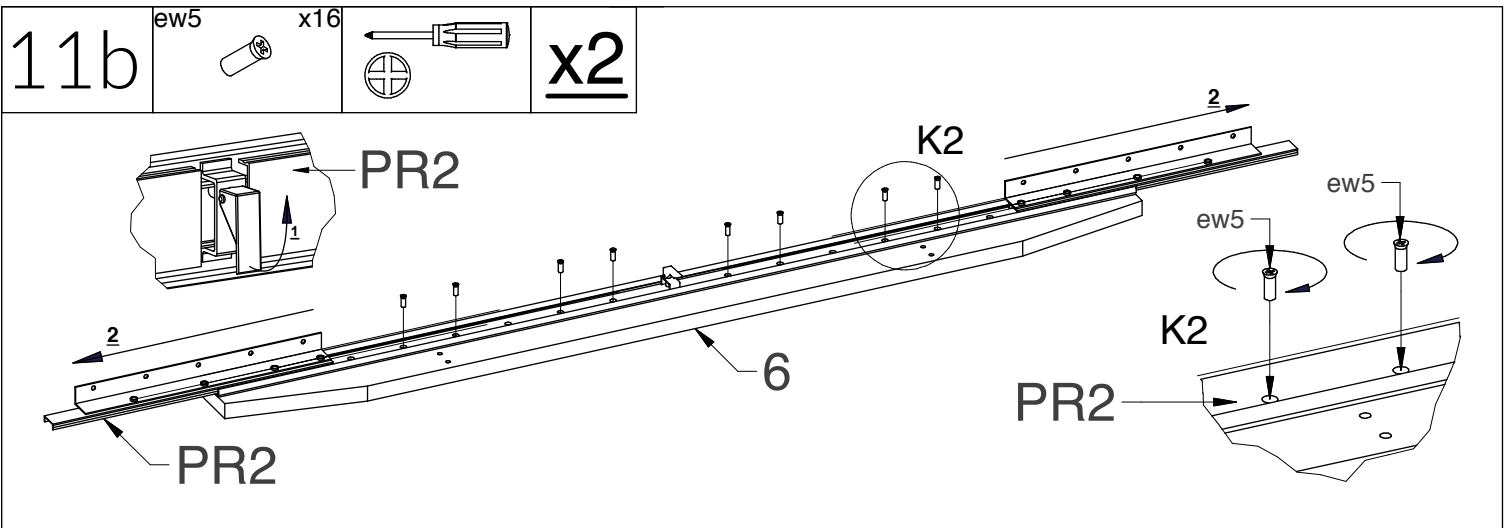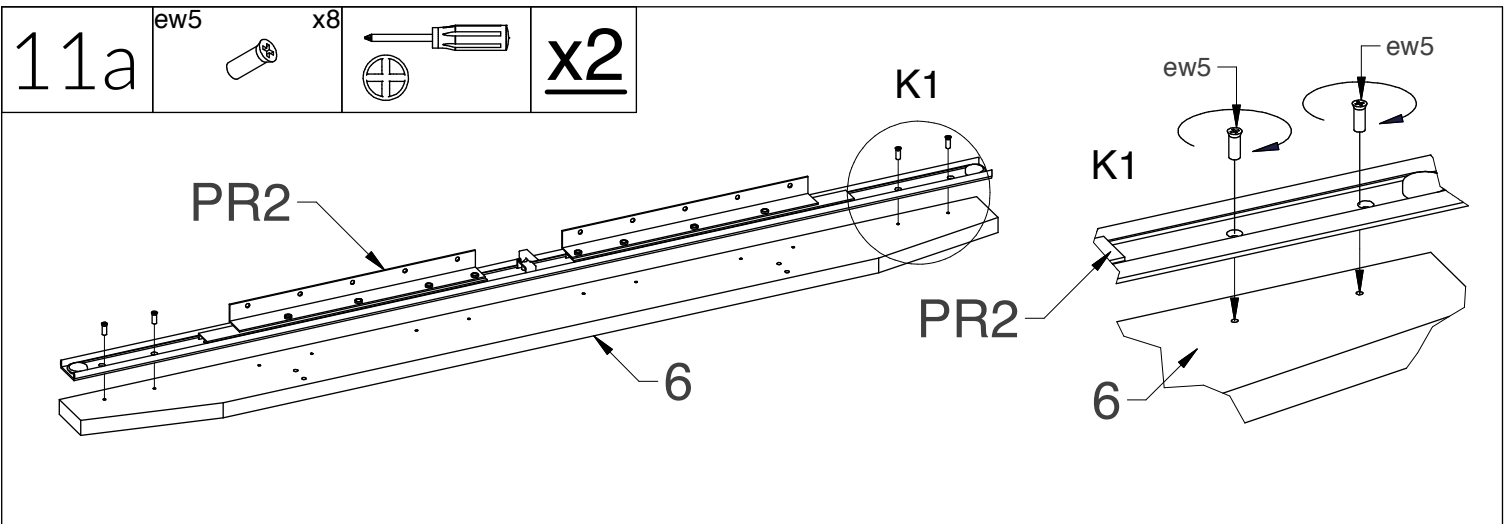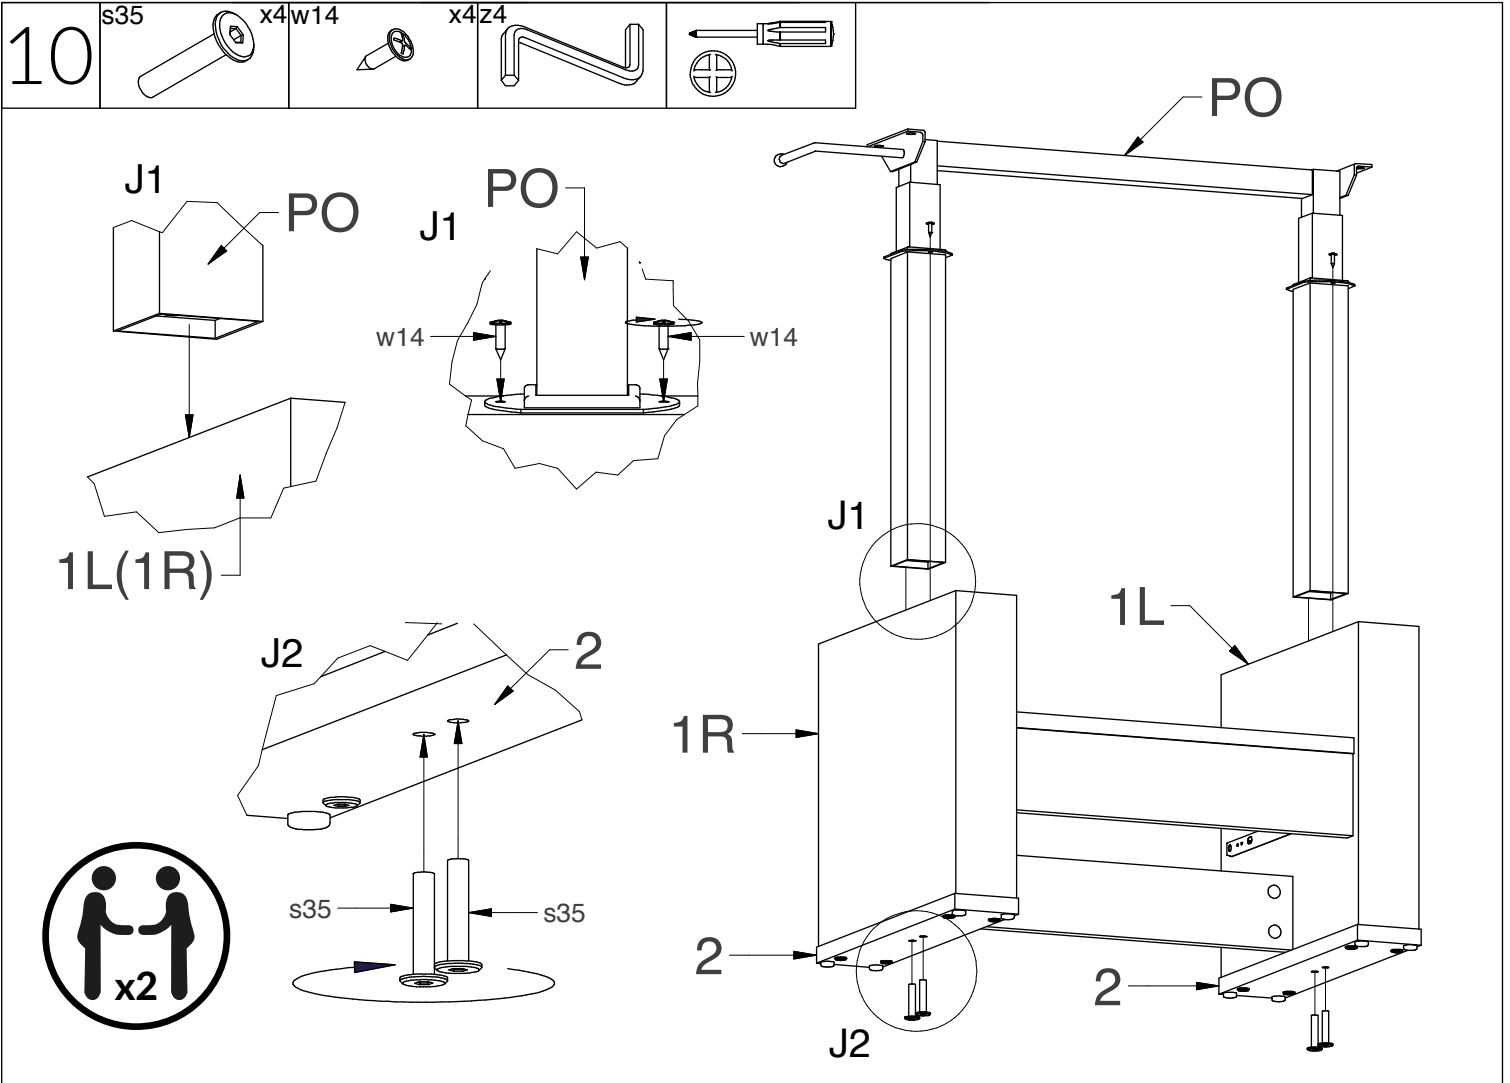

12



k40



x8zk



x8z3

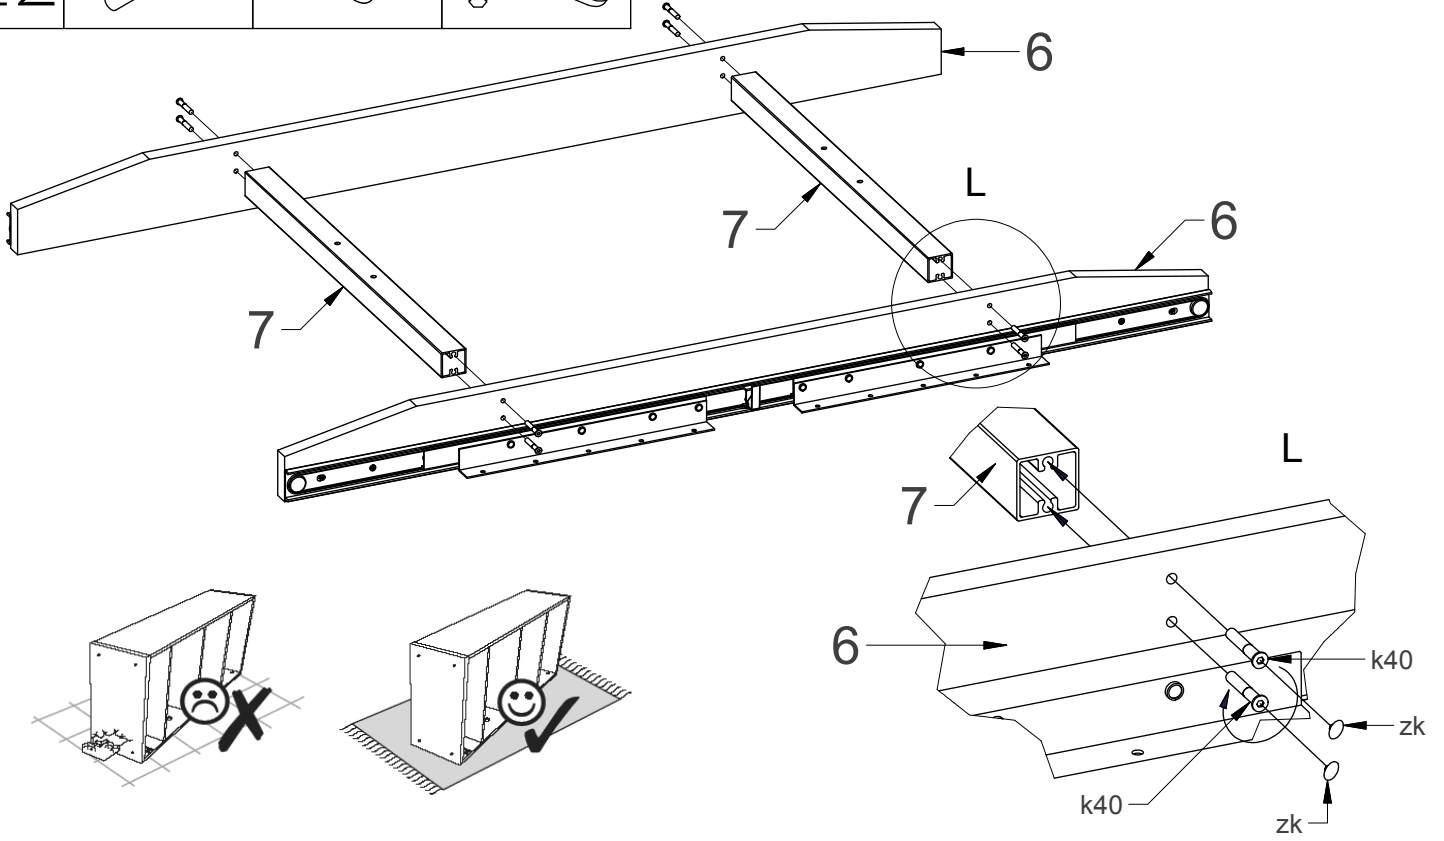



13

ew5



x20



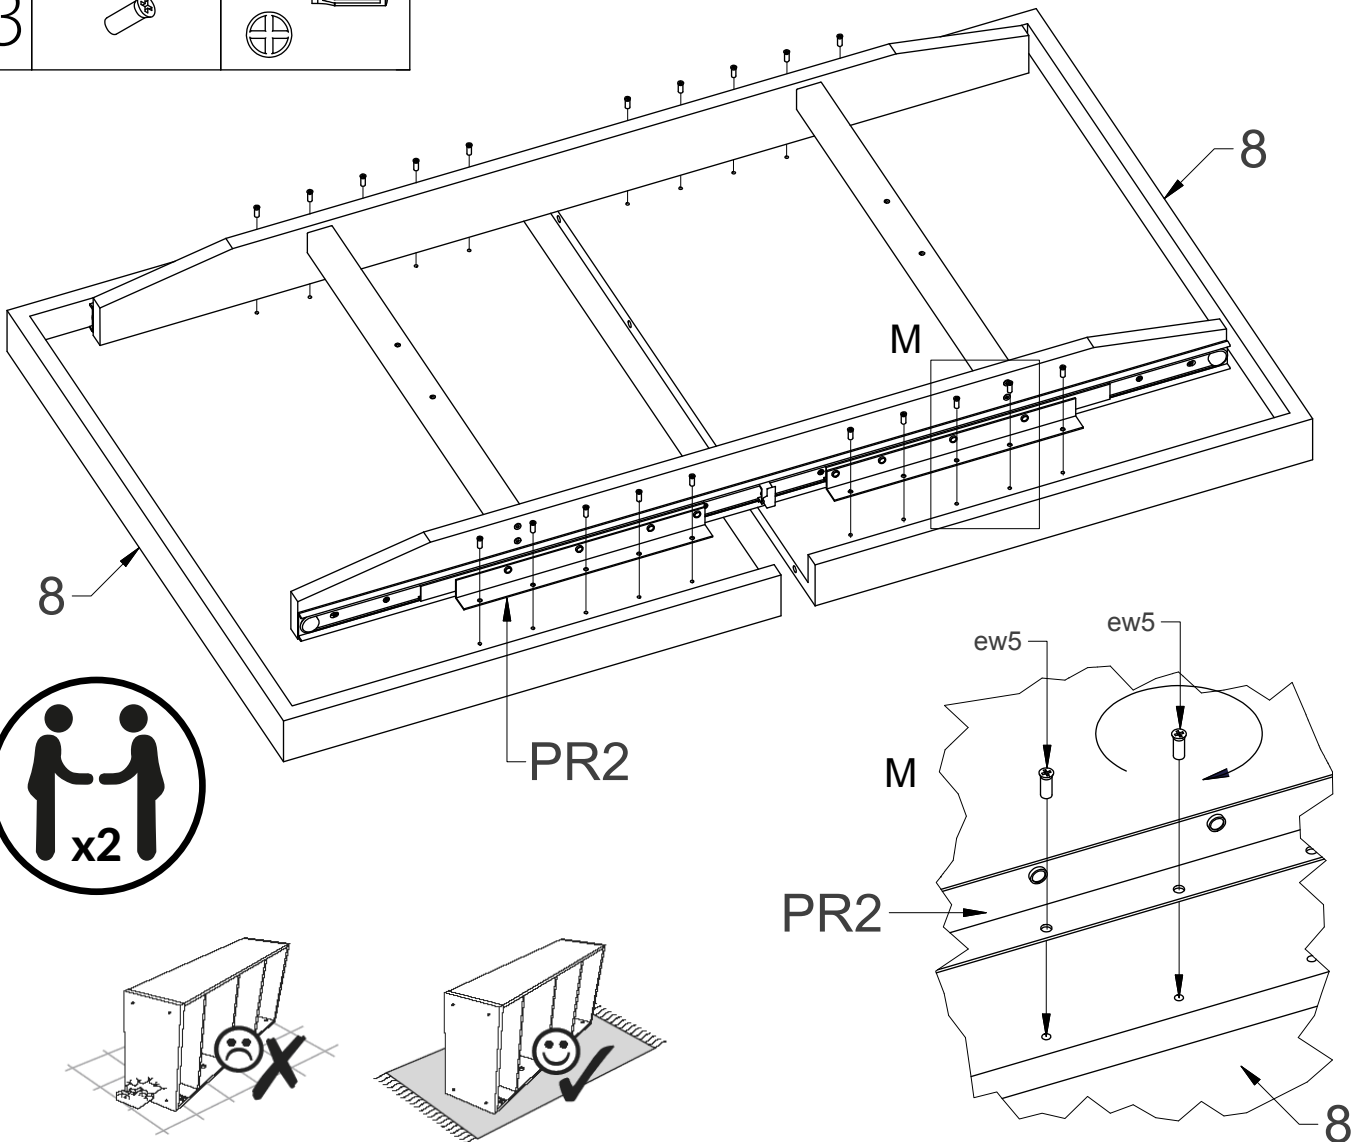



14

s12



x4 z4

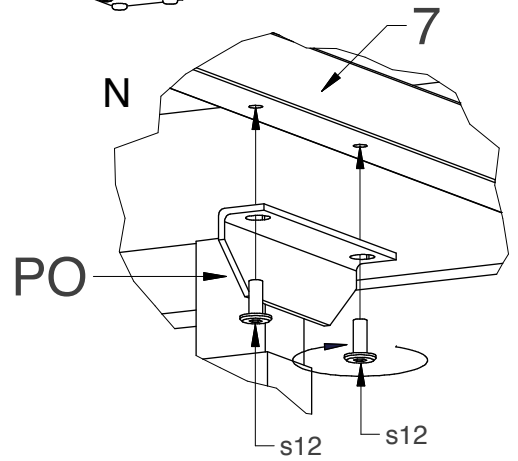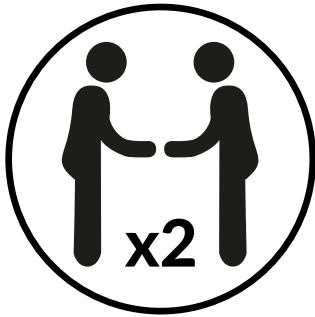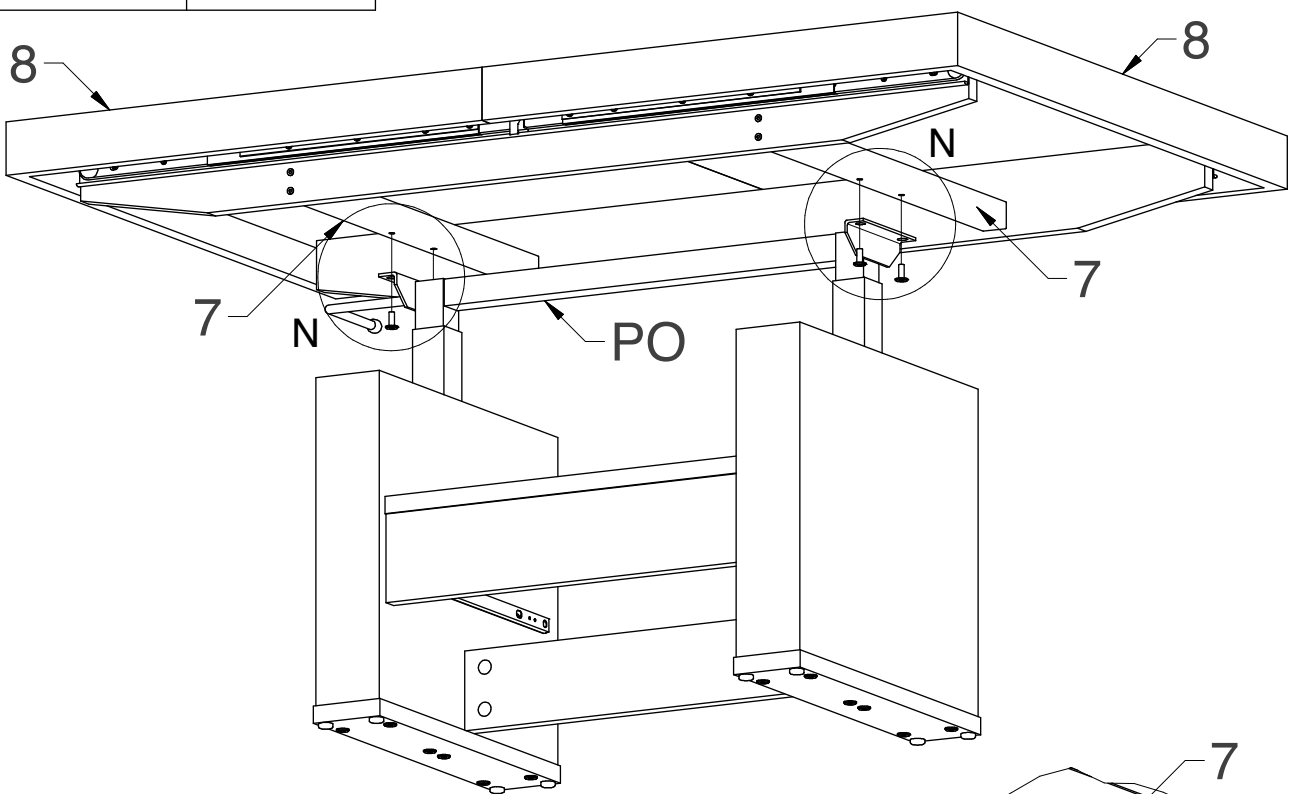

15




m



x2 l



x2

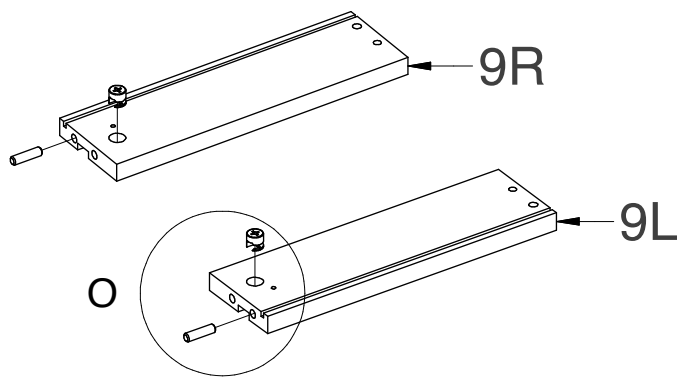
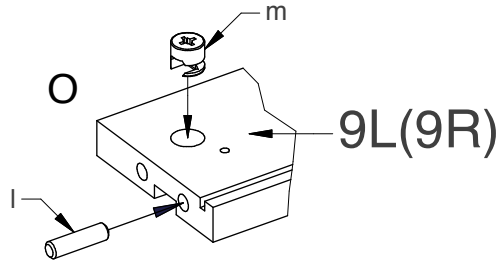



16


l




x2

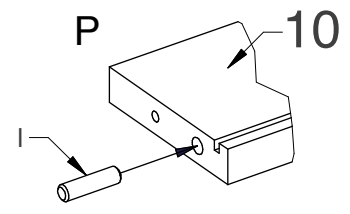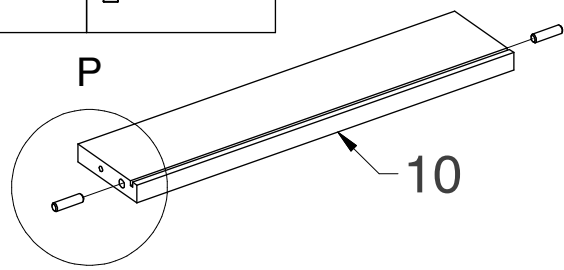


17 k50 x2 z4

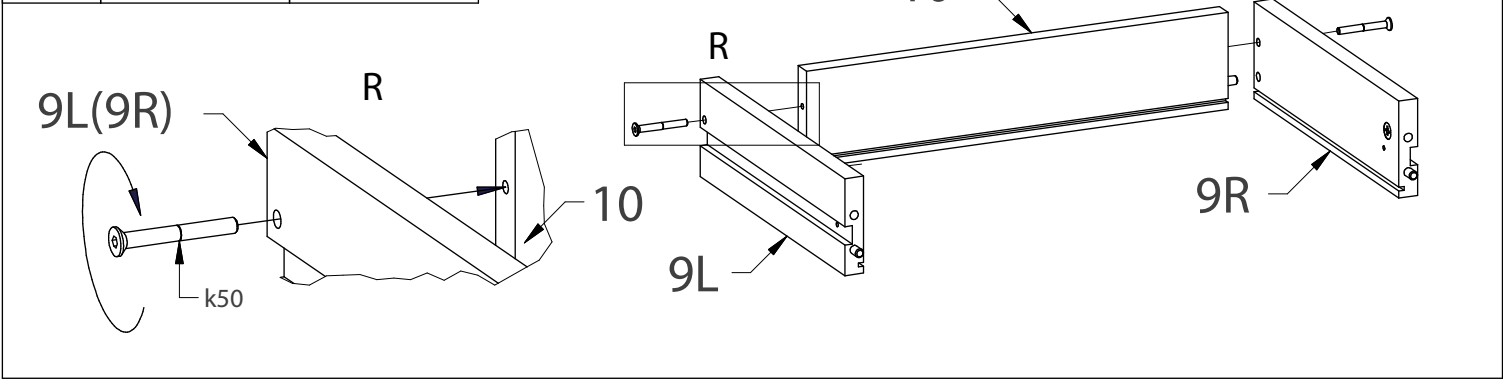


18 t x2

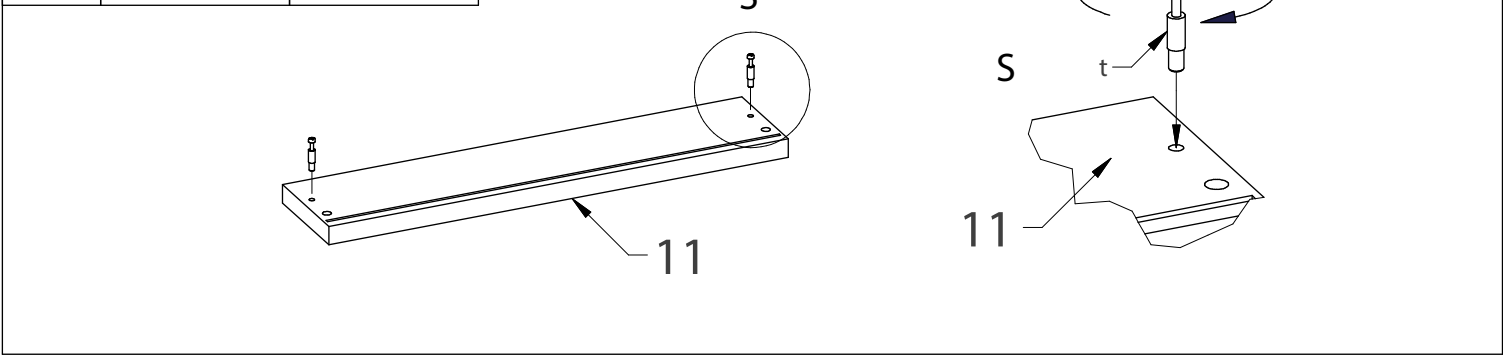

19

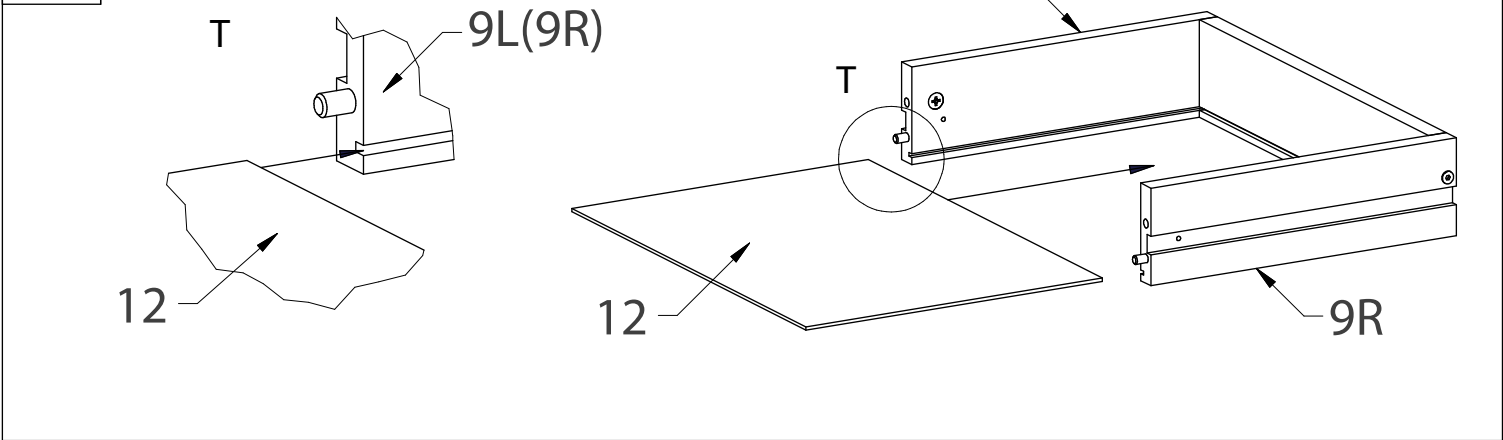

20 zm x2

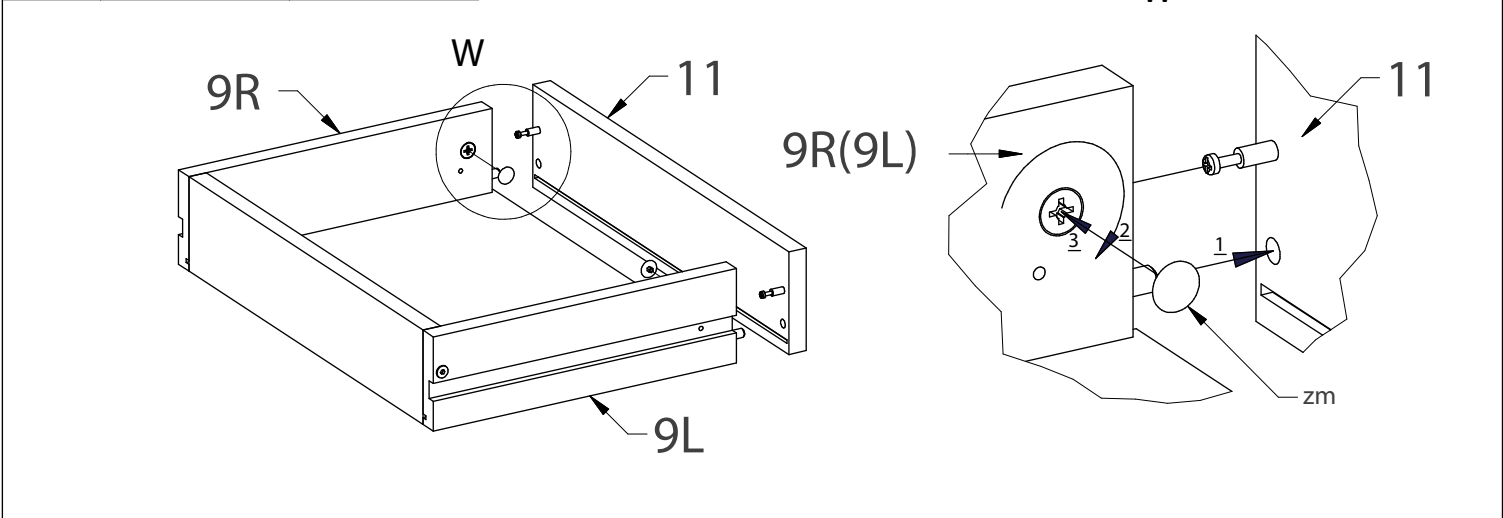


21

w12



x2



Y1

9L(9R)

PR

Y2


9L(9R)

w12

9R


Y2

Y1

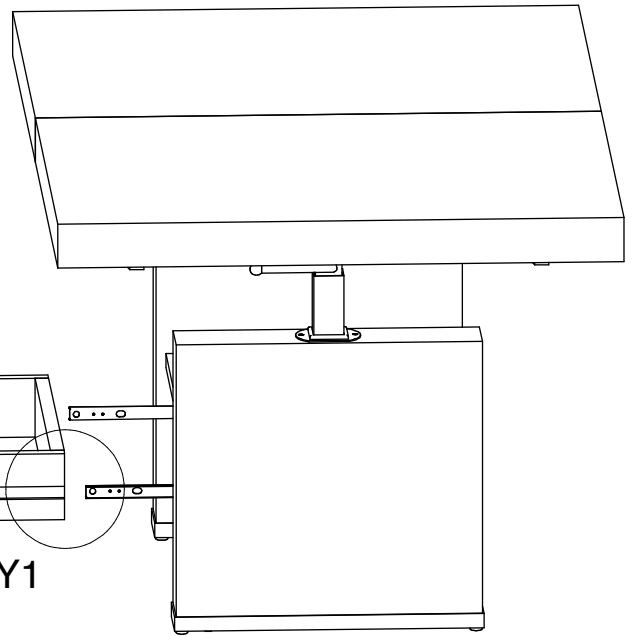

22



f



x4

zm



x4

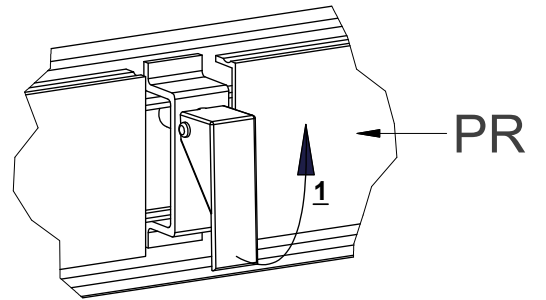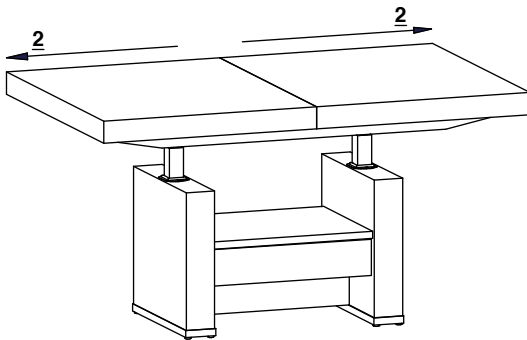


U1

13

U1

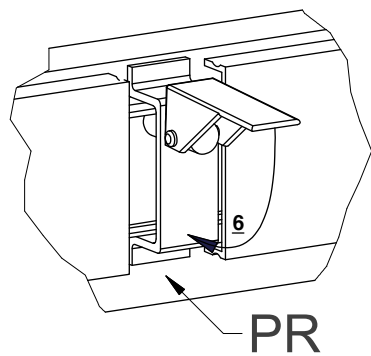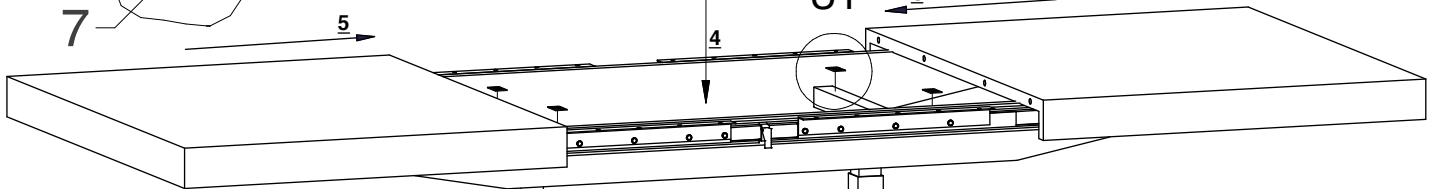

PR

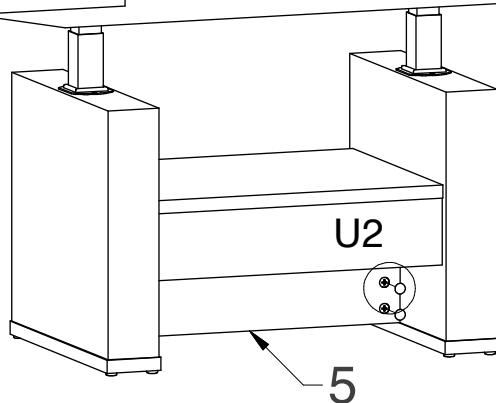

U2

5

U2

5

zm

