



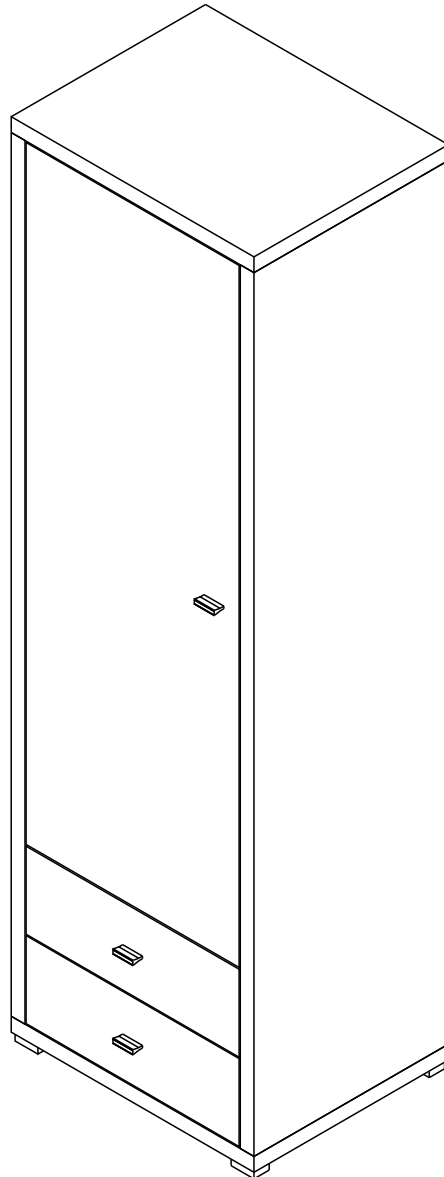















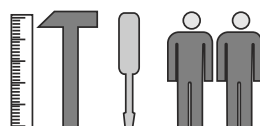
KENDO K11

Szafa 1 drz.




1  x16	2  x16	3  x16	4  8x35 x32	5  x2	6  3.5x16 x34
8  x50	9  x3	10  x4	11  x4	12  x8	13  4x28 x6
14  x1	15  x4	7  x1	16  x4	17  x1	
















Czas mont. - 120 min.





KENDO K11







Szafa 1 drz.

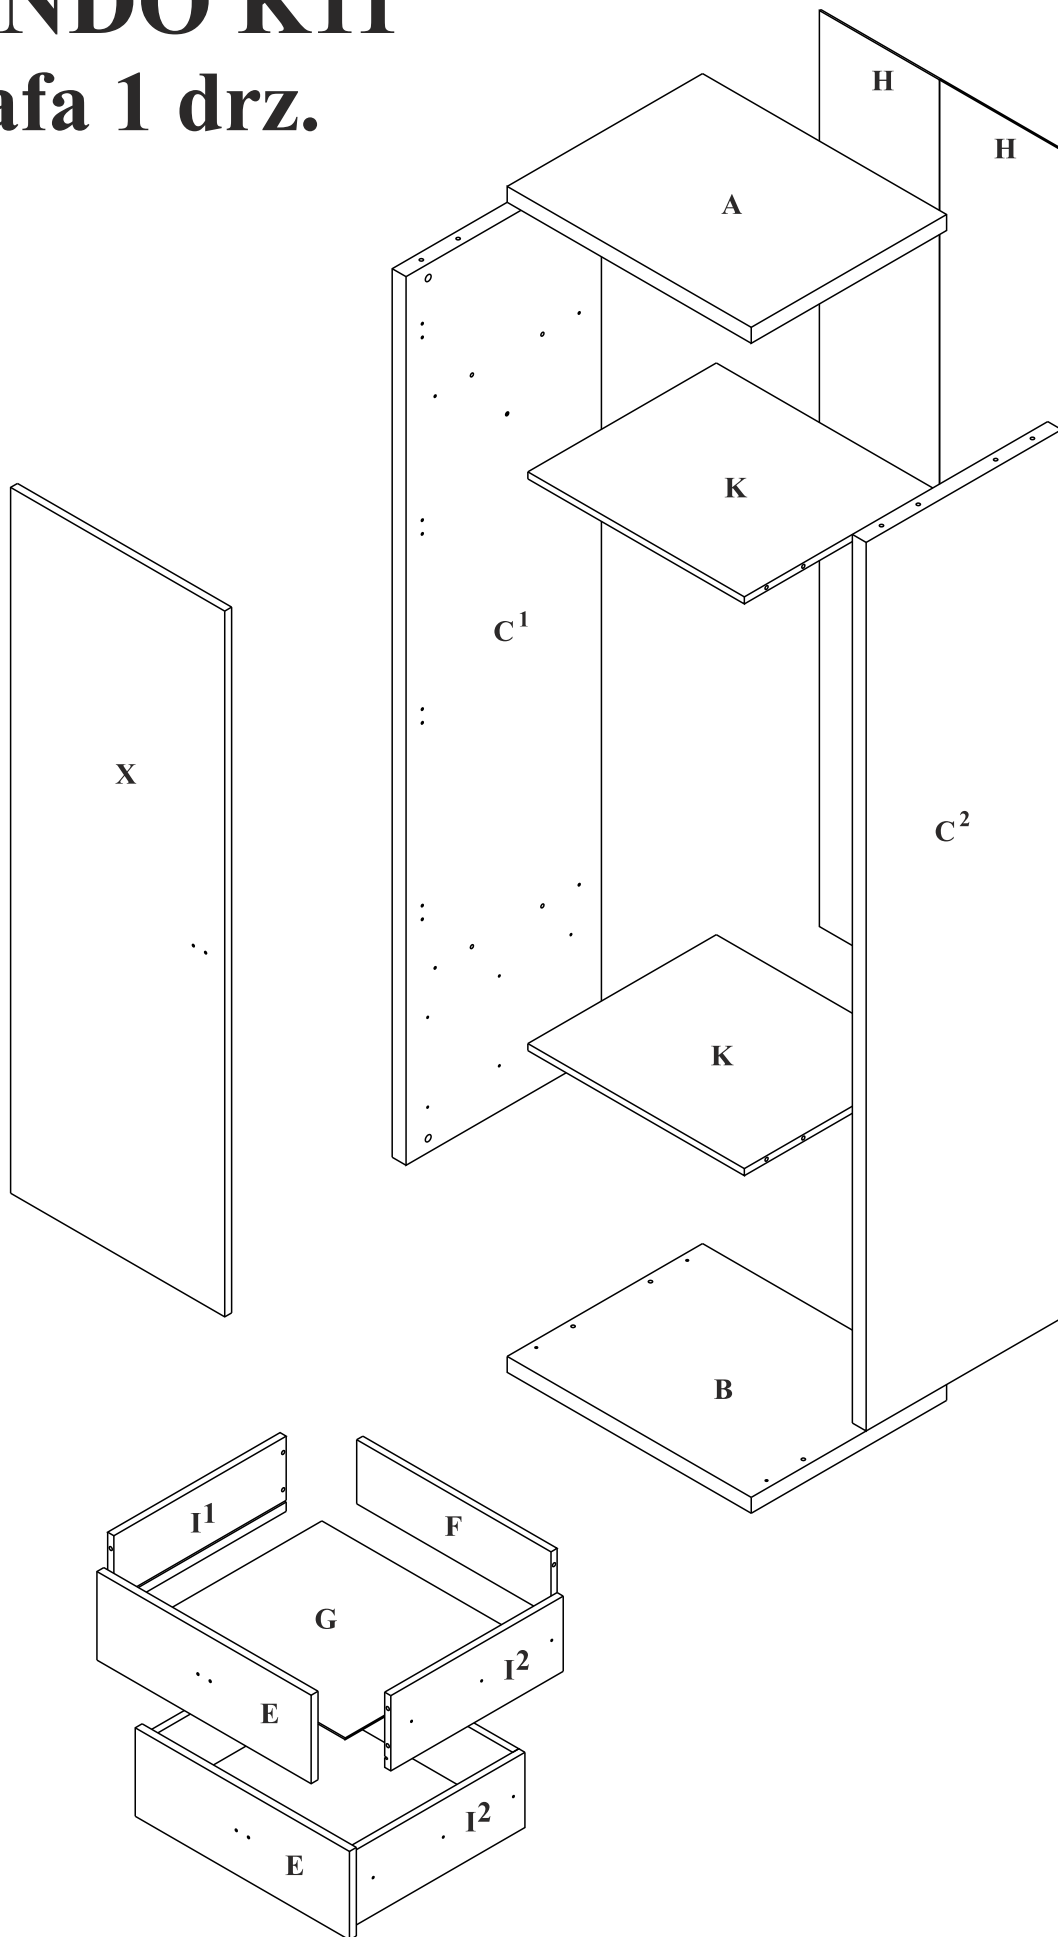

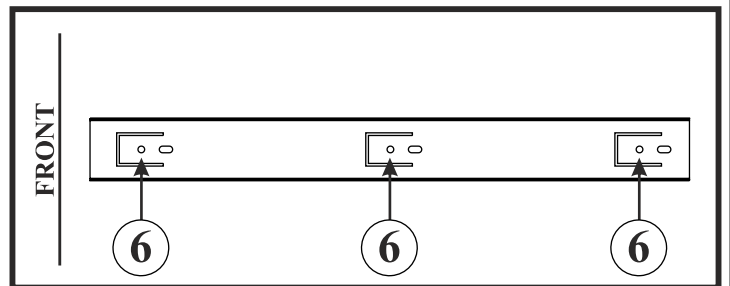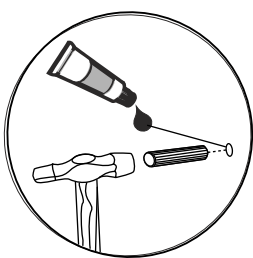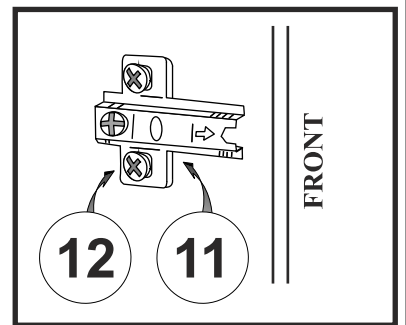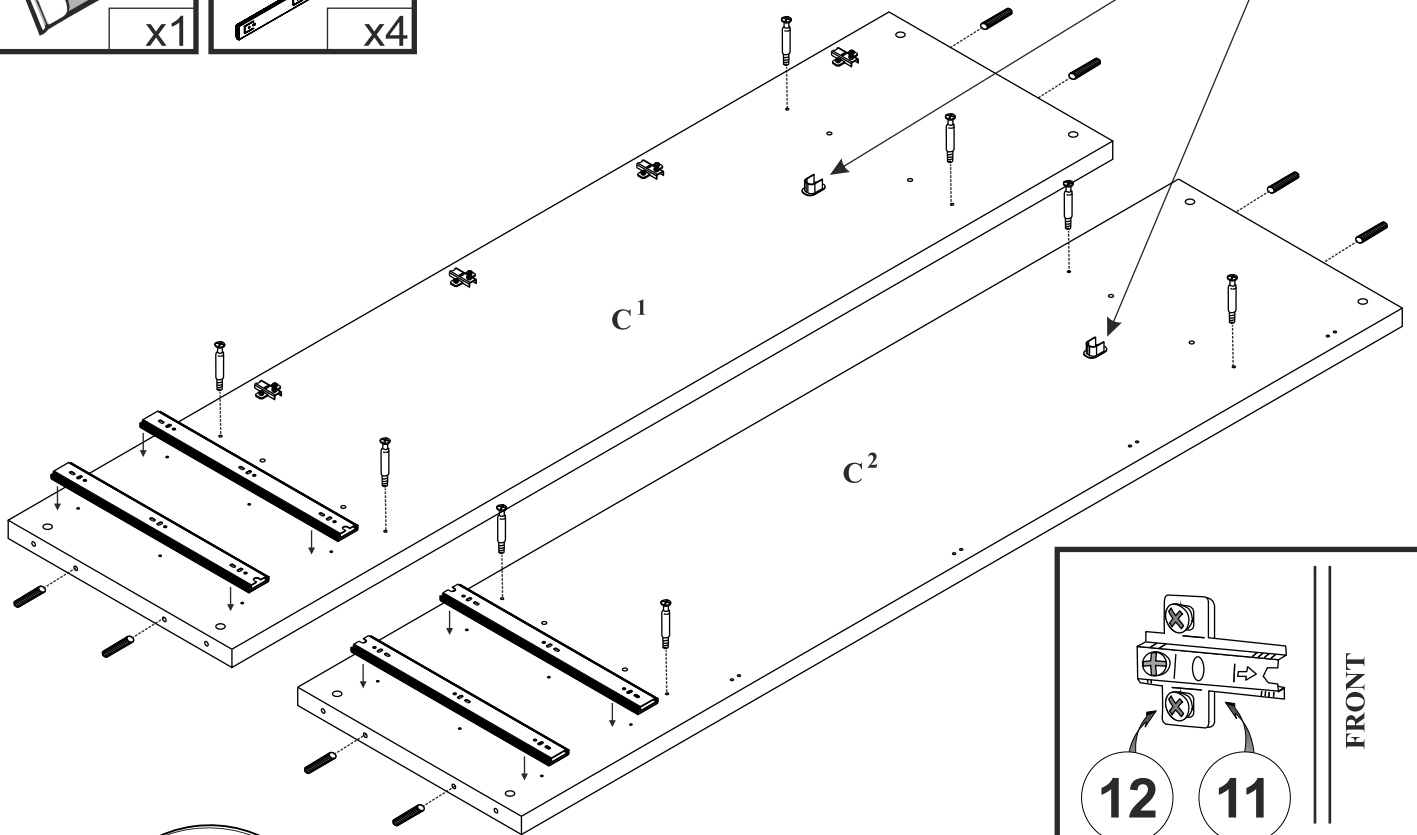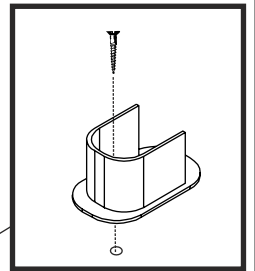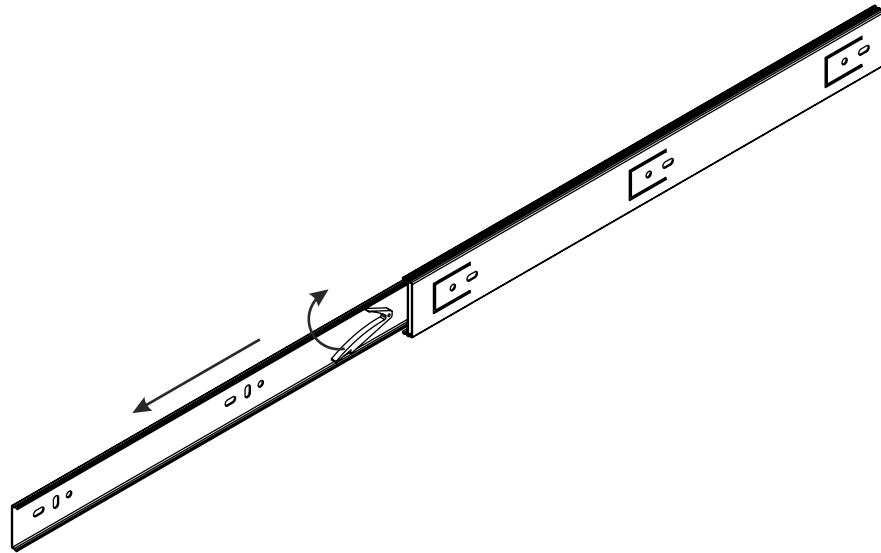





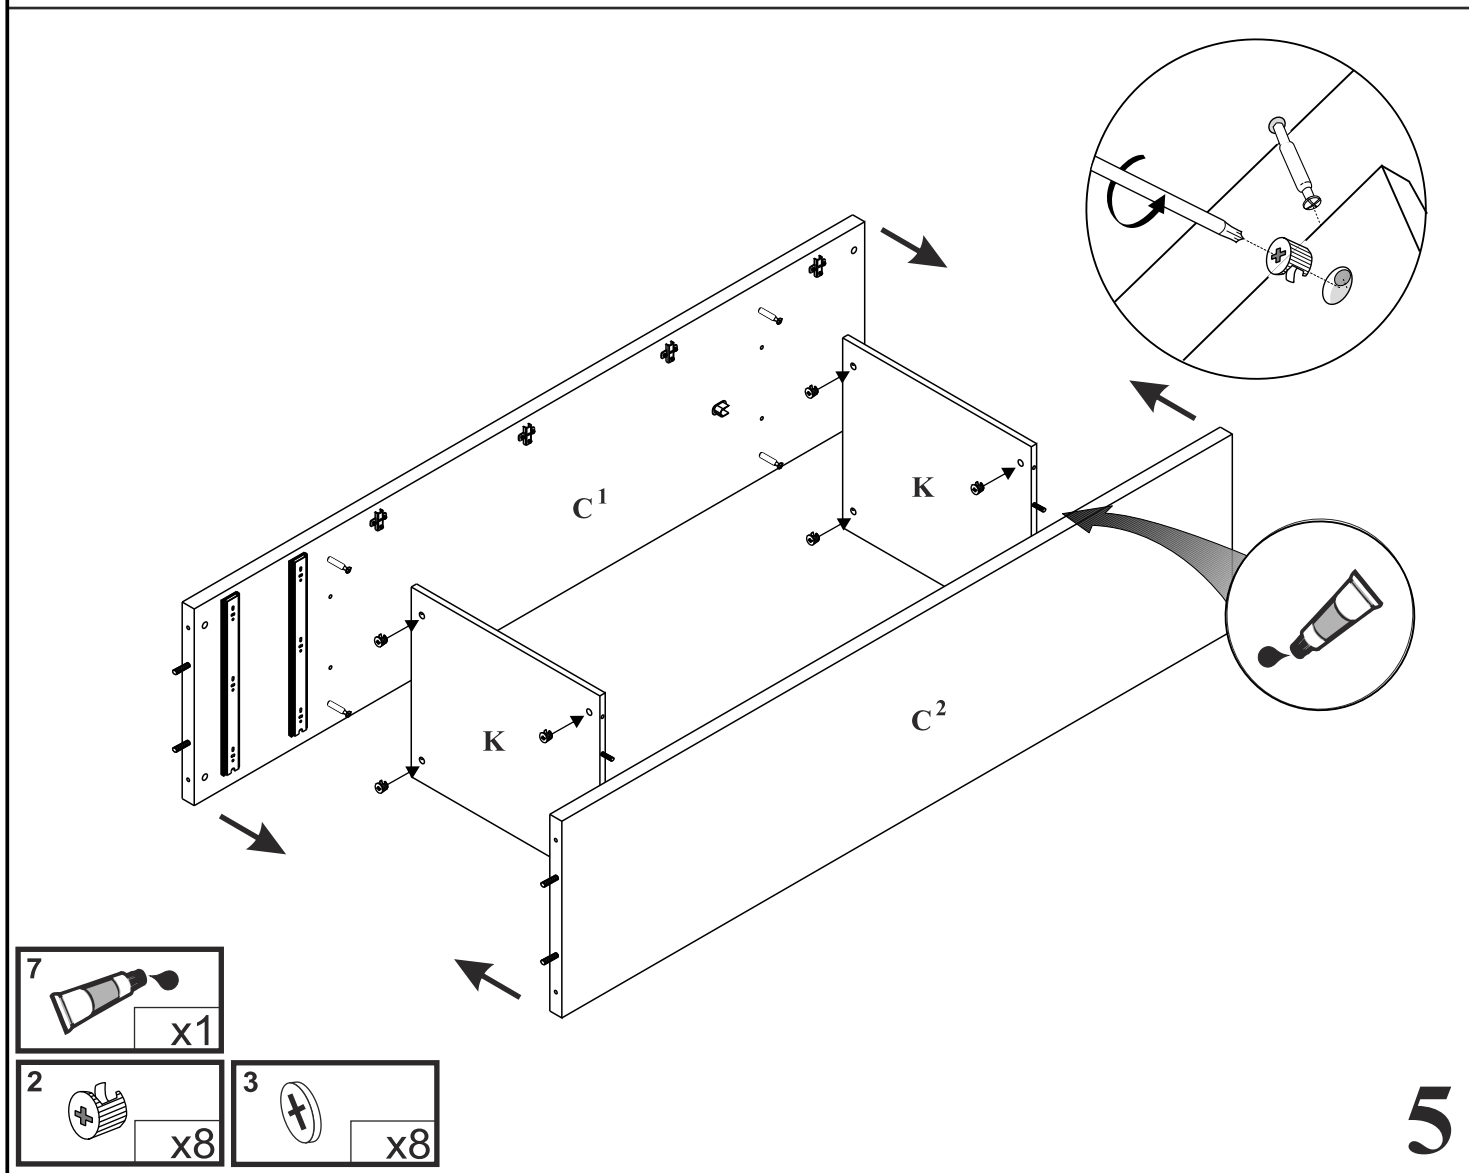
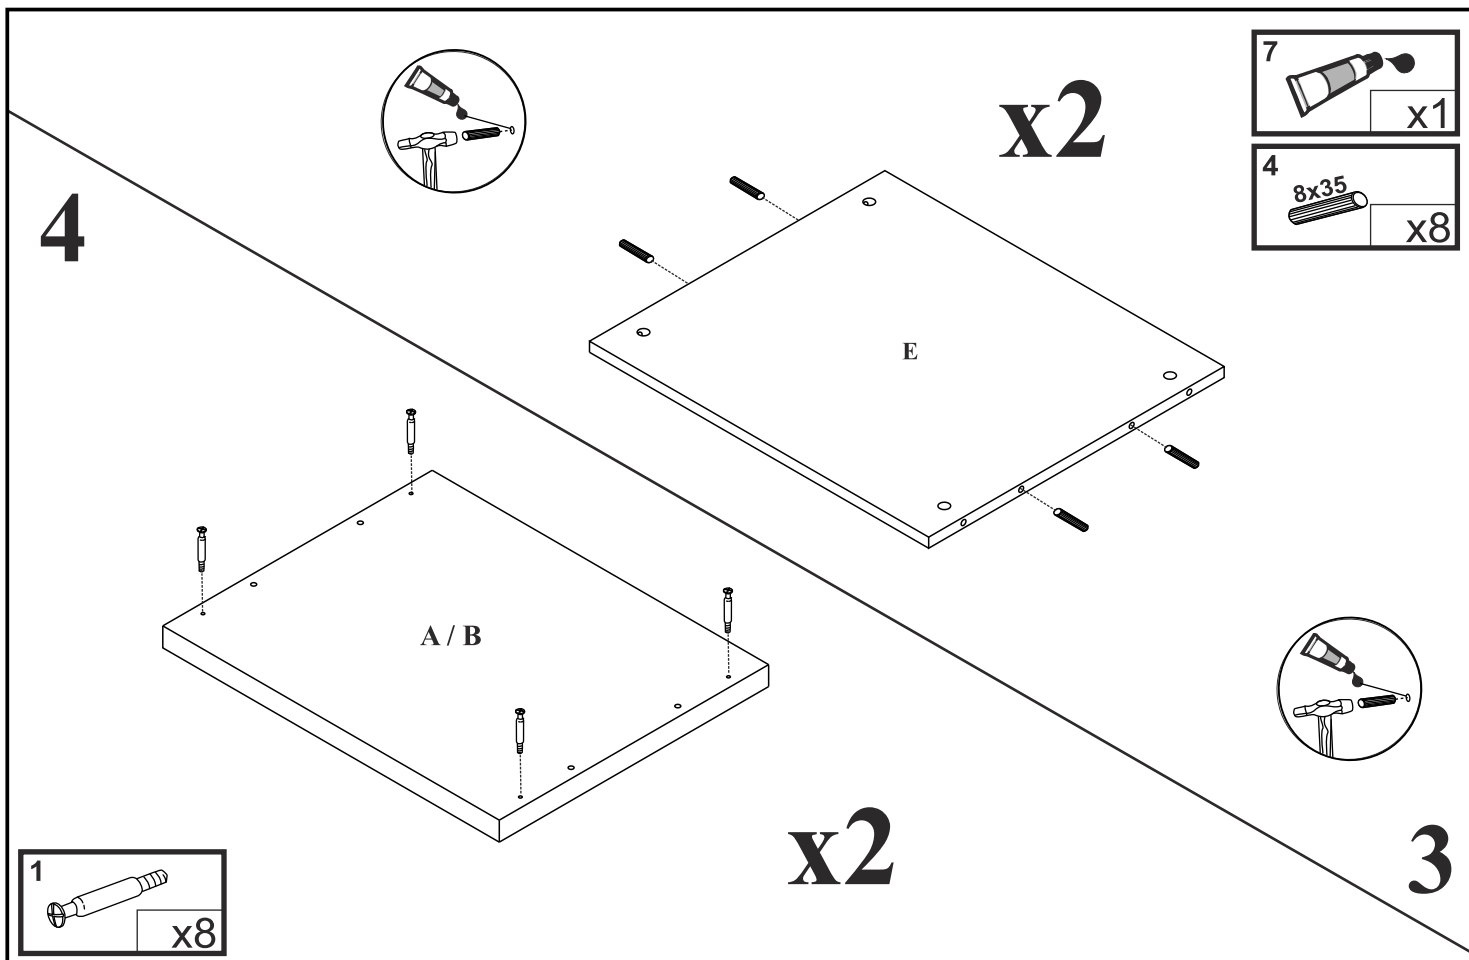






6

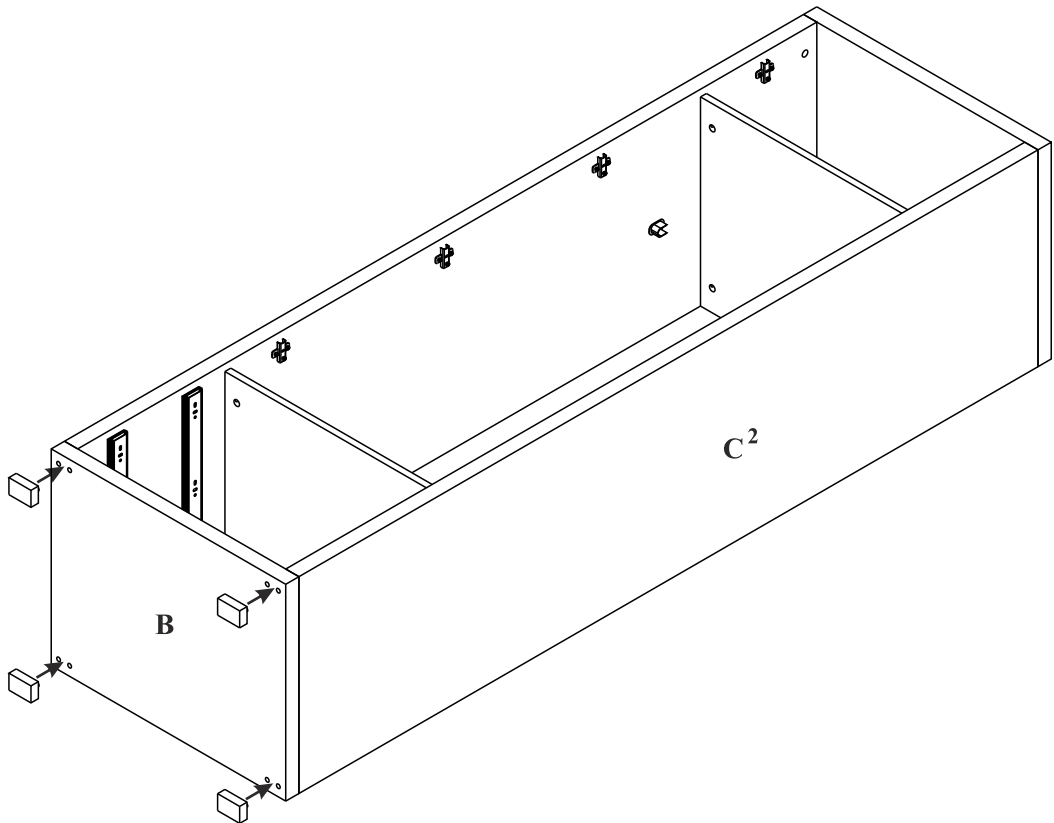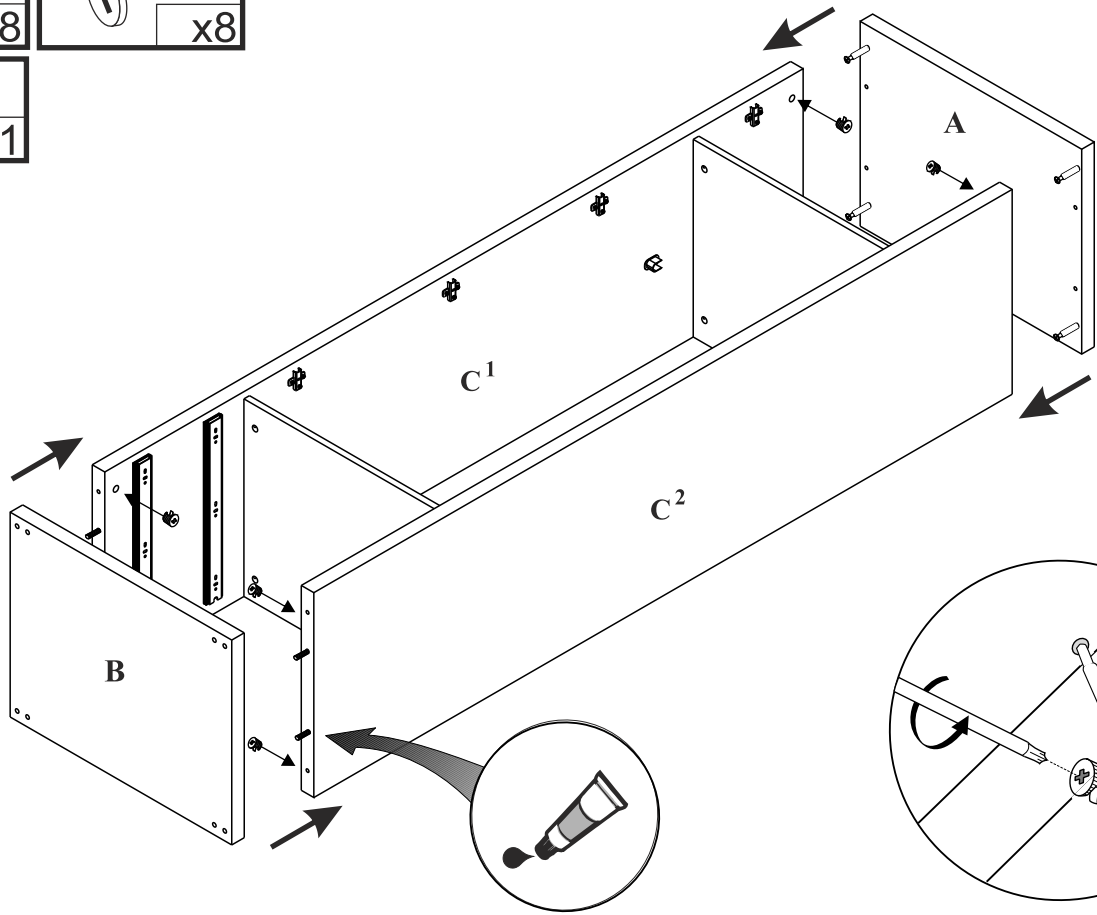


7











- 8  x40
- 14  x1

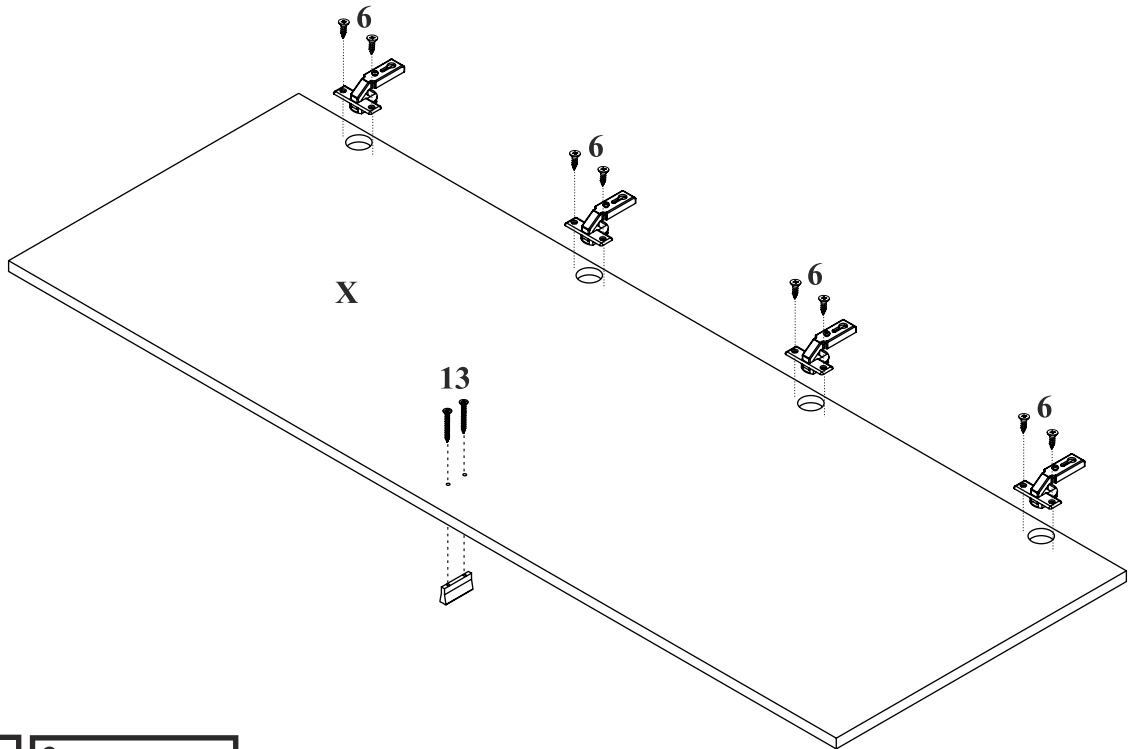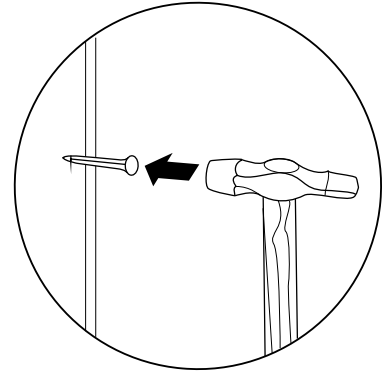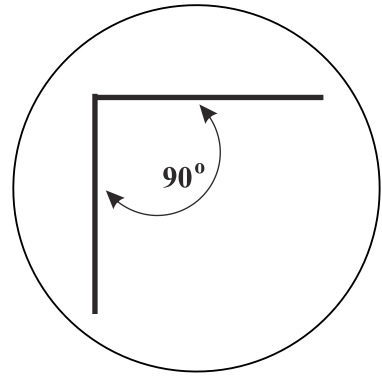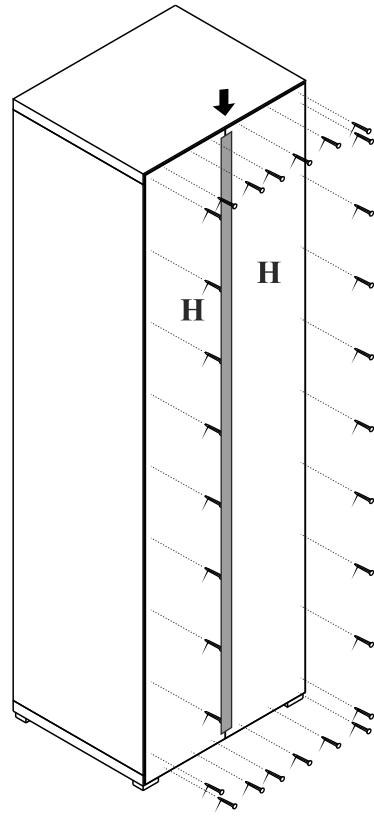



- 13  4x28 x2
- 6  3,5x16 x8
- 9  x1
- 10  x4

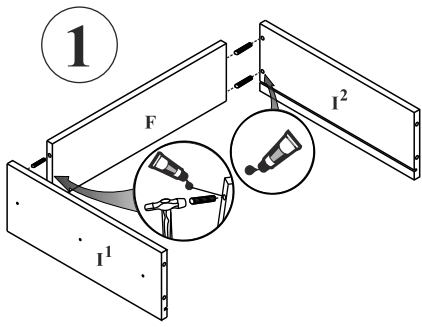

x2


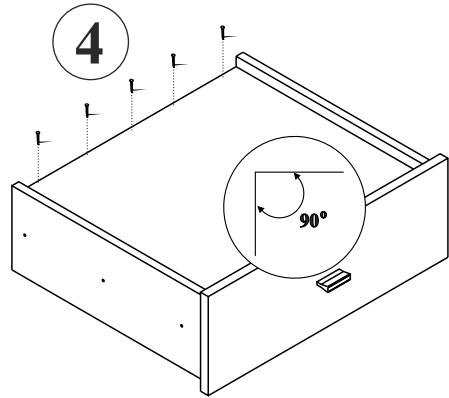
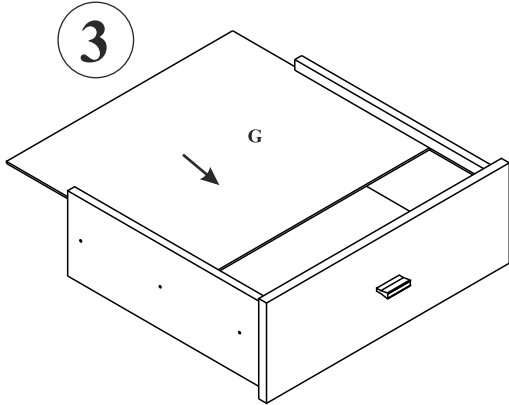
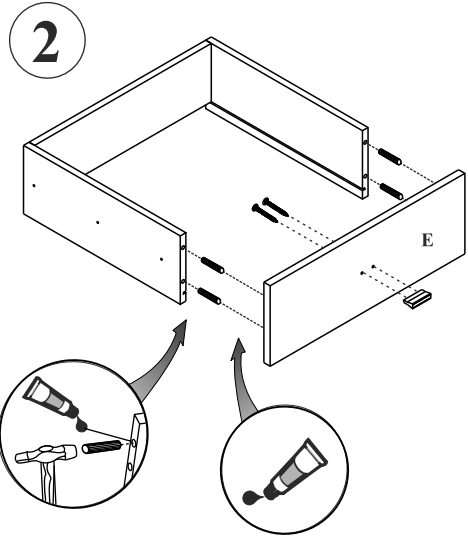


x2

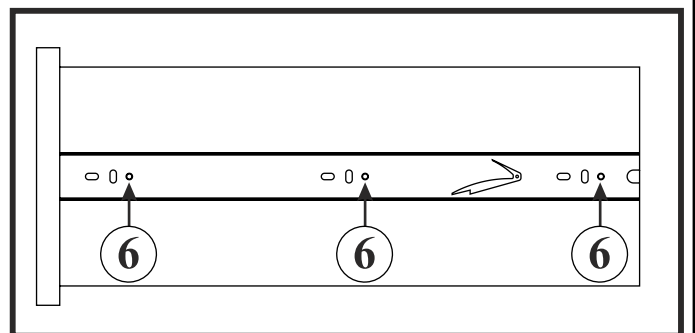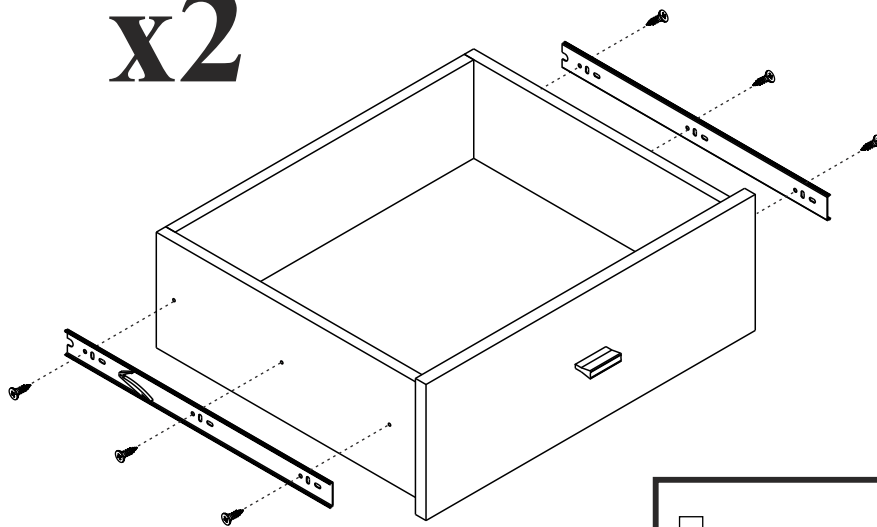



12

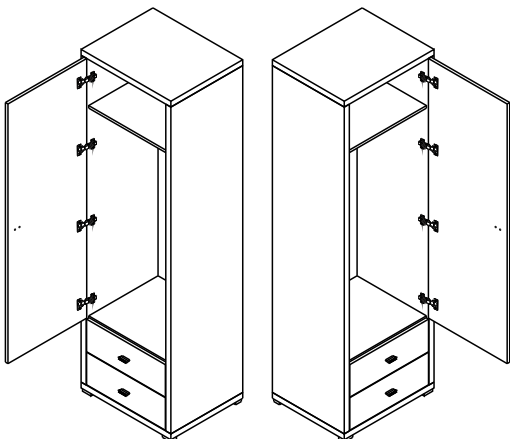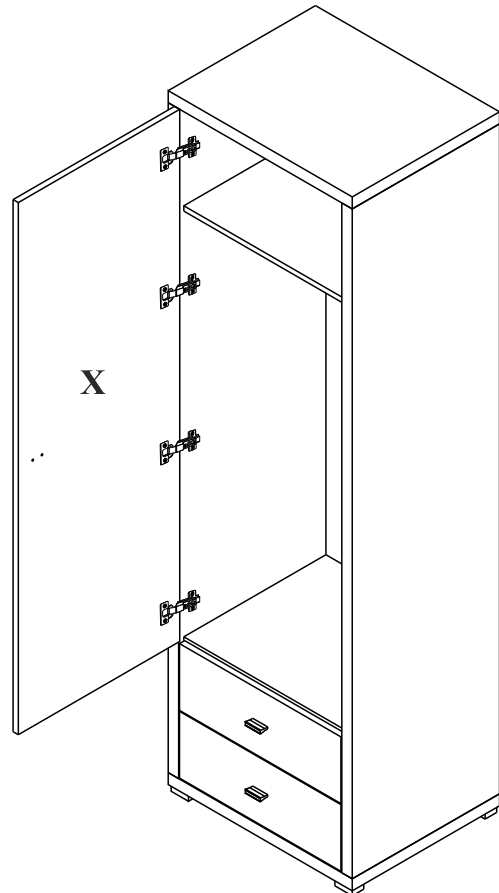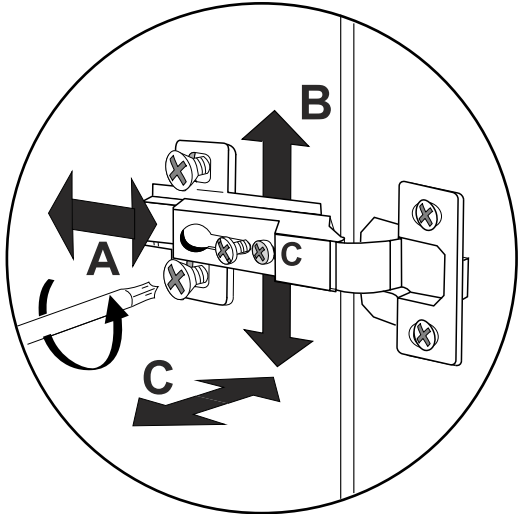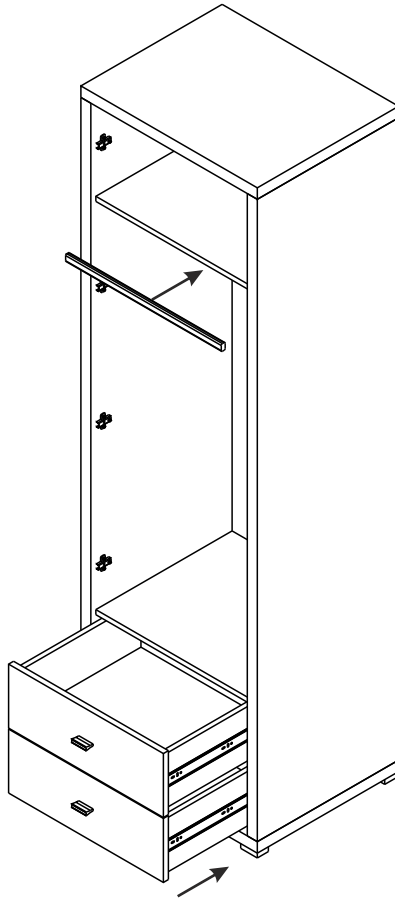

13